Cuisinart

Custom Classic™ Toaster Oven Broiler



Setup: Rack Positions

Rack Position A
For baking pizzas, cake,
chicken or muffins



Rack Position B

For baking nachos, quesadillas or potatoes



Rack Position C
Use for toast, bagels and open-faced sandwiches



Cuisinart

Custom Classic™ Toaster Oven Broiler

IMPORTANT!

Do not throw away these instructions. Read before operating your new Custom Classic™ Toaster Oven Broiler. Keep for future reference.

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure safe operation and optimum performance, please read the entire Instruction Booklet.

Function Guide

Use: Toast, Bagel, Bake and Broil

Toast:

Oven rack should be in position C



Turn Function dial to Toast

Turn Toast Shade dial to desired setting, then press Start/Stop button.



Bagel:

Oven rack should be in position C



Turn Function dial to Bagel

Bagels should be put in face up. Turn the Toast Shade dial to desired setting, then press Start/Stop button.



Pakai

Oven rack should be in position A



Turn Temperature dial to desired temperature, then turn the Function dial to Bake. The oven indicator light will turn on to indicate the oven is preheating.



Broil:

Oven rack should be in position B or C





Turn Temperature dial to the Broil position, then turn the Function dial to Broil. The oven indicator light will turn onto indicate the oven is preheating.



Helpful Hints



If toasting two items, center them in the middle of the rack.



If toasting four items, place two in front and two in back, evenly spaced.



If toasting six items, place three in front and three in back, evenly spaced.

- When in Toast or Bagel mode, you must press the Start/Stop button to begin the toasting cycle.
- When using Bake or Broil functions, the unit will turn on as soon as you move the Function dial from the Off position. Make sure to set your temperature first.