

Troubleshooting

PROBLEM	CAUSE	SOLUTION
The coffeemaker is beeping	Filter door is not closed	<ul style="list-style-type: none"> • Check to be sure that all components of the filter compartment are in place • Close filter door (you will hear a click if the door is properly shut)
	Filter basket is not in place	<ul style="list-style-type: none"> • Open filter door by pressing the filter door release button • Hook filter basket with cover onto door • Close filter door (you will hear a click if the door is properly shut)
	Coffee grounds and filter from previous use are still in filter basket	<ul style="list-style-type: none"> • Remove filter and used coffee grounds • Add new filter
The brew cycle will not start	There is no water in the water reservoir	<ul style="list-style-type: none"> • Fill the water reservoir using the water level markings
Coffee is weaker than usual	There are not enough beans in the hopper	<ul style="list-style-type: none"> • Be sure there are enough beans in your hopper for the amount of coffee you intend to brew
	Strength setting is incorrect	<ul style="list-style-type: none"> • Check your strength setting — displayed on the LCD screen • To change your strength setting, press the Strength Control button
The coffeemaker is not grinding beans	The hopper may be too full	<ul style="list-style-type: none"> • Turn the coffeemaker off and unplug • Remove some of the beans from the hopper
EMPTY appears in LCD display	Coffee grounds and filter from previous use are still in filter basket	<ul style="list-style-type: none"> • Remove filter and used coffee grounds • Add new filter
CLEAN is flashing on the LCD when the unit is turned on	Coffeemaker needs to be decalcified	<ul style="list-style-type: none"> • Run a clean cycle — follow the decalcification directions on page 11 of Instruction Booklet
The coffeemaker will not enter CLEAN mode	The water reservoir is empty	<ul style="list-style-type: none"> • Fill the water reservoir with decalcification mixture before turning the coffeemaker on - Follow the decalcification directions on page 11 of Instruction Booklet

IMPORTANT

Do not throw away. Read before operating your new Brewing System. Keep for future reference.

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure safe operation and optimum performance, please read the entire Instruction Booklet.

Cuisinart®

Fully Automatic Burr Grind & Brew™ Coffeemaker

BEFORE FIRST USE

Before using your Cuisinart® Fully Automatic Burr Grind & Brew™ Coffeemaker for the first time: BE SURE TO REMOVE POLYBAGS FROM CARAFE AND COFFEEMAKER. PLACE CARAFE BACK ONTO BASE. During the manufacturing process, dust can get trapped in your coffeemaker. We recommend flushing out the system before brewing your first pot of coffee. Simply follow "Making Coffee with Pre-Ground Beans," page 10 in the Instruction Booklet. Skip step #1 and be sure to use only water and a paper filter...no coffee! Once you've done that, brew a pot of real coffee and get ready to enjoy Cuisinart at its best!

Quick Reference SETUP Guide

1. Fully immerse the charcoal water filter in cold tap water and soak for 15 minutes. Flush filter by running cold tap water through holes in bottom of compartment for 10 seconds (see complete instructions on page 8 of your instruction booklet). Insert the filter into the water filter holder. Open the water reservoir and place filter holder into the unit.



2. Pour your desired amount of water into the water reservoir. A water level indicator is located on the side of the unit.



 
3. Open the filter basket door by pressing the Release button, and insert a paper filter or permanent filter into the filter basket holder. Replace the cover, and close door.



4. Remove hopper lid, fill with beans, and replace the lid.



5. Press the ON/OFF button to turn on the coffeemaker. Select the amount of cups you wish to brew by turning the Grind Control knob. Select your desired coffee strength by pressing the Strength button. Your selected coffee strength will be indicated in the bar on the LCD display.

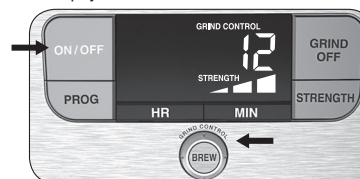

6. To start grinding & brewing, press the BREW button. Once the coffee has finished brewing, the unit will immediately enter Keep Warm mode and alert you with a beep.



Quick Reference PROGRAMMING Guide

- 1.** **To Set the Time:** Press and hold the Hour or Minute button until the clock begins flashing. Hold down the Hour or Minute button to quickly scroll through the numbers. When desired time approaches, release the button and press repeatedly to advance one digit at a time. To finish, wait for the numbers to stop flashing.



- 2.** **To Program Auto ON:** Press the ON/OFF button, then press the Program button once until Auto ON is displayed on LCD. Hold the Program button until the clock begins flashing. Set the time you want coffee to begin brewing (follow “Set the Time” instructions). Once you are done setting the time, leave untouched. The clock will display the time of day and the Auto ON indicator, to remind you that the programming function is in use.



- 3.** At the programmed time, the white ON/OFF indicator light will come on, as well as BREW button light, indicating that the brew cycle is starting.



- 4.** To start the brew cycle at the same time on another day, simply press the ON/OFF button and then press the Program button once. The Auto ON icon will be displayed on the LCD display.



- 5.** **To Program the Auto OFF:** Press the ON/OFF button, then press the Program button 2 times until Auto OFF icon appears on the LCD display. Set the desired Auto OFF time by holding down the Program button until Auto OFF icon begins flashing. Set the desired shutoff time by pressing the Hour or Minute button to scroll from 0 to 4 hours. To exit, do nothing for 5 seconds. **NOTE:** Auto OFF icon will only be displayed on LCD during program mode.



Keeping It CLEAN

PERMANENT FILTER, FILTER BASKET, FILTER BASKET COVER, CARAFE AND LID.

Wash in warm, soapy water and rinse thoroughly or clean in the upper rack of the dishwasher. Dry all parts after every use.

TO CLEAN GRINDER OF COFFEE BEANS

1. Remove hopper cover.
2. Scoop out remaining beans from the hopper.
3. Place the clean, dry filter basket assembly in place (a paper filter can be used if desired).
4. Press the ON/OFF button to turn the coffeemaker on.
5. Press and hold down the Brew button until the coffeemaker begins to grind the beans.
6. After grinding stops, be sure to turn coffeemaker off.
7. Dispose of or re-purpose coffee grinds in filter basket.
8. Use a damp cloth to clean the hopper.
9. Leave the cover off to let the hopper dry completely before adding coffee beans.