

187.325 X 215.9MM

LIFETIME WARRANTY (U.S. AND CANADA ONLY)

Your Cuisinart Easy Grip™ Bakeware is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime. If your bakeware should prove to be defective within your lifetime, we will repair it (or, if we think it necessary, replace it) without charge to you, except for shipping and handling. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190, or write to Consumer Service Center, Cuisinart, 150 Milford Road, East Windsor, NJ 08520. To facilitate the speed and accuracy of your return, please also enclose \$7.00 for shipping and handling of the product, along with original proof of purchase. Be sure to include a return address, description of the product problem, phone number, and any other information pertinent to the product's return. Please pay by check or money order made payable to Cuisinart. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration or other damage to external or internal surfaces that does not impair the functional utility of the bakeware. This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

CALIFORNIA RESIDENTS ONLY

California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions. California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (a) to the store where it was purchased or (b) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

©2017 Cuisinart
150 Milford Road, East Windsor, NJ 08520
Made in China 17CW027608

Any trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

IB-14942

Cuisinart

Easy Grip™ Bakeware



CUISINART EASY GRIP™ BAKEWARE

Cuisinart Easy Grip™ Bakeware is an investment that will prove its worth every time you use it. Exclusively designed aluminum encapsulated base provides superior heat conductivity and even heat distribution to meet the demands of gourmet chefs everywhere. When properly cared for, your Cuisinart Easy Grip™ Bakeware will give countless years of service and pleasure. Follow the use and care suggestions in this leaflet to preserve and maintain the cookware's original beauty.

BEFORE YOU BAKE

Wash the pan in warm, sudsy water. Rinse and dry thoroughly. The performance of your Cuisinart Easy Grip™ Bakeware depends on a thoroughly clean baking surface. See cleaning instructions below.

BAKING WITH CUISINART EASY GRIP™ BAKEWARE

Prepping the pan: Prepare the pan according to recipe instructions. Grease and flour if directed. Although the surface of Cuisinart Easy Grip™ Bakeware is designed for easy release, following the recipe instructions always gives the best results. You may use spray oils with Cuisinart Easy Grip™ Bakeware. The special nonstick formula used in our bakeware makes spray oils easy to remove. (However, DO NOT use spray oils to cook in any Cuisinart® cookware items. The nature and content of spray oils cause them to leave a gummy residue on cookware that is very difficult to remove completely and as a result, food may actually stick, even on nonstick cookware!)

Preheat the oven: Preheat the oven to the temperature recommended in the recipe. Keep in mind, however, that no two ovens are calibrated exactly the same. We recommend that you watch foods closely the first few times you bake. This will help you to determine how and when to adjust either the baking temperature or the baking time. Bakeware is oven safe to 450°F. Do not use under the broiler. Cuisinart Easy Grip™ Bakeware handles will get as hot as the rest of the bakeware.

Utensils: Use only nylon, wood, or coated utensils with Cuisinart Easy Grip™ Bakeware. This will help prevent scratches and maintain the appearance and performance of your bakeware. Using metal utensils on any nonstick surface will damage the surface over time. Always remove food from the pan before slicing or cutting. The surface of Cuisinart Easy Grip™ Bakeware

makes it easy to remove foods cleanly and completely.

Cleaning: We recommend that you hand-wash your bakeware thoroughly, inside and out, after every use. However, Cuisinart Easy Grip™ Bakeware can be cleaned in the dishwasher if necessary. Before you put the pan in water, allow it to cool. Putting a hot pan in cooler water can warp the pan and can create sudden steaming and hot water spattering, which can cause burns. Use a sponge or dishcloth with hot, sudsy water to remove food from the pan's baking surface and exterior surfaces.

For burned-on or stubborn spots caused by high baking temperatures, use non-abrasive cleanser and a soft nylon or nylon-covered cleaning pad. (Keeping the exterior free of built-up grease and food stains helps to maintain the pan's appearance and performance.) DO NOT IMMERSE OR SOAK your insulated bakeware. Insulated bakeware is designed to "breathe" and is not watertight. Soaking can result in water collecting in the airspace between the pan layers. (The nonstick finish releases foods so easily, you should never really need to soak any Cuisinart Easy Grip™ Bakeware.) To dry out an insulated pan in which water has collected, put the pan upside down in a 250°F oven for 30 minutes. DO NOT USE abrasive cleansers or cleaning pads, oven cleaners or other caustic solutions, baking soda, or dishwasher detergent. These cleaners will damage the surface and void the Lifetime Warranty.

Storage: DO NOT stack or nest bakeware items without a protective layer. This can result in scratches on your nonstick surfaces. Like any bakeware, Cuisinart Easy Grip™ Bakeware will show wear after continued use. This will not affect the bakeware's performance.