

Beautiful copper sheen. Perfect for various mixing tasks. Copper is ideal for whipping light and fluffy meringues to divine soufflés because of its superior ability to keep egg whites stable.

©2020 Cuisinart  
East Windsor, NJ 08520  
Made and printed in China  
18CW056664 CCMB3P  
PG-38008A



Your Cuisinart® Cookware is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime.

### **HASSLE-FREE REPLACEMENT WARRANTY**

Your ultimate satisfaction in Cuisinart products is our goal, so if your Cuisinart® Cookware should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, email us at

**[www.cuisinart.com/customer-care/product-return](http://www.cuisinart.com/customer-care/product-return).**

Or call our Consumer Service Center toll-free at 1-800-726-0190 to speak with a representative.

This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration or other damage to external or internal surfaces which does not impair the functional utility of the cookware.

This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (a) to the store where it was purchased or (b) to another retail store which sells Cuisinart® products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. To obtain a return shipping label, email us at **[www.cuisinart.com/customer-care/product-return](http://www.cuisinart.com/customer-care/product-return)**. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

# Cuisinart®

## COPPER COLLECTION

Chemistry & beauty combined!

Includes 1.5 qt., 3 qt., and 5 qt.  
bowl capacities

Lifetime warranty\*



# Cuisinart®

COPPER  COLLECTION

Cuisinart® Copper Cookware is an investment that will prove its worth every time you use it. When properly cared for, your Cuisinart® Copper Cookware will give countless years of service and pleasure. Follow the use and care suggestions in this leaflet to preserve and maintain cookware's original beauty.

## BEFORE USING

Wash your new cookware in hot water with a mild soap or dish detergent before using for the first time. Rinse thoroughly and wipe dry immediately with a soft dish towel.

## EASY MAINTENANCE

Immediately after each use, fill the bowl with hot water and liquid dish detergent; let stand until lukewarm. Use a sponge or soft cloth to remove any remaining food particles. Do not use steel wool or other coarse metal pads that may make scratches. Rinse thoroughly and dry immediately for a flawless finish.

## RESTORING COPPER

To maintain the copper's luster, use either a metal polish or homemade mixture of ½ cup white vinegar, ¼ cup table salt, and ¼ cup scouring powder. Rub the mixture over the copper with a cloth or nonabrasive scrubber, and rinse clean with hot water. Never use cleaners containing bleach to clean copper cookware.

## WHAT ABOUT THE DISHWASHER?

We do not recommend Cuisinart® Copper Cookware be cleaned in the dishwasher. The abrasive cleaning agent will scratch and discolor the copper exterior.

### WHAT ABOUT METAL UTENSILS?

We recommend using plastic or wooden utensils with your Cuisinart® Copper Cookware. You may prefer using metal utensils. These may scratch the bowl surface, but will in no way impair the performance of your Cuisinart® Copper Cookware. You may use a hand mixer with metal beaters which can scratch the interior surface, but will not impair the cookware's performance or its durability.

### TO REMOVE STAINS

Calcium in your water may leave a multicolored stain. This is from a harmless deposit and can be removed with a little warm vinegar. Certain foods such as pasta or oatmeal may leave a light residue or cloudy appearance. This can be easily removed with any nonabrasive cleaning product.

**LIFETIME WARRANTY\* (U.S. & CANADA ONLY)**