


Cuisinart®

33" Bar Wall Cookware Rack Model CRBW-33

Beautifully display Cuisinart® Cookware and keep it within easy reach. This Cuisinart® Cookware Rack eliminates the need to bend down to stack and store cookware in cupboards. The rack is easy to install and designed to last a lifetime.

WARNING:
PLEASE READ ALL INSTRUCTIONS
BEFORE ASSEMBLING AND INSTALLING
YOUR NEW COOKWARE RACK

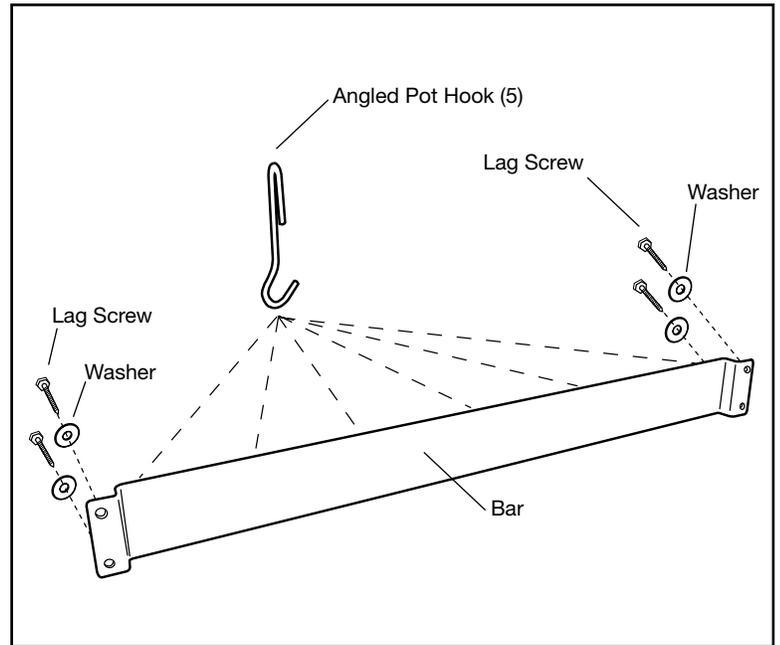

Rack Size: 33" Length x 1½" Width x 3" Height

Enclosed you will find everything needed for the proper assembly and use of your cookware rack. The parts and hardware included are:

- 1 Bar
- 4 Long Lag Screws
- 4 Washers
- 5 Angled Pot Hooks

ASSEMBLY AND INSTALLATION INSTRUCTIONS

Please proceed carefully, using the following instructions to ensure this rack is assembled properly for safe installation and use and without damage to the finish. Haste in assembly could result in needless scratching or marring of the finish.

1. Unwrap rack from plastic covering.
2. Mount the rack onto the wall using the four washers and four lag screws. The lags must go into the solid wood of wall studs or into a wooden wall – to install otherwise is incorrect.
Plasterboard or wall fasteners will not work and should not be used. Your local hardware store can advise you if special hardware is needed for your particular kitchen.
 - a. Measure and drill four holes, using a 5/32" bit into wood stud.
 - b. Mount the Cuisinart® Bar Wall Cookware Rack to wall using the four washers and four lag screws provided.
3. Your rack is now ready for use. Hang the hooks on the rack and distribute the weight of your cookware evenly around the rack. **Each hook can hold up to 5 lbs. Do not overload.**
4. The care and cleaning of our pot racks must be done with a low-abrasive cleaner. A periodic cleaning will restore your cookware rack to its original brilliance.

WARNING It is important that your cookware rack be assembled and installed according to the above directions. If the unit is assembled and/or installed incorrectly, it could become unstable, collapse and possibly cause injury. Cuisinart is not responsible for any damages due to improper assembly or installation.

OVER, PLEASE

WARRANTY

LIFETIME WARRANTY (U.S. and Canada Only)

Your Cuisinart® Cookware Rack is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime.

HASSLE-FREE REPLACEMENT WARRANTY

Your ultimate satisfaction in Cuisinart products is our goal, so if your Cuisinart® Cookware Rack should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, email us at www.cuisinart.com/customer-care/product-assistance/product-inquiry. Or call our Customer Service Department toll-free at **1-800-726-0190** to speak with a representative. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration or other damage to external or internal surfaces that does not impair the functional utility of the Cookware Rack. This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (a) to the store where it was purchased or (b) to another retail store that sells Cuisinart® products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at **1-800-726-0190**. To obtain a return shipping label, email us at www.cuisinart.com/customer-care/product-assistance/product-inquiry. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.