


Cuisinart®

Brushed Stainless Steel Oval Wall Cookware Rack Model CROW-25B

Beautifully display Cuisinart® Cookware and keep it within easy reach. This Cuisinart® Brushed Stainless Cookware Rack eliminates the need to bend down to stack and store cookware in cupboards. The solid brushed stainless rack is easy to install and designed to last a lifetime.

WARNING:
**PLEASE READ ALL INSTRUCTIONS
BEFORE ASSEMBLING AND INSTALLING
YOUR NEW COOKWARE RACK**

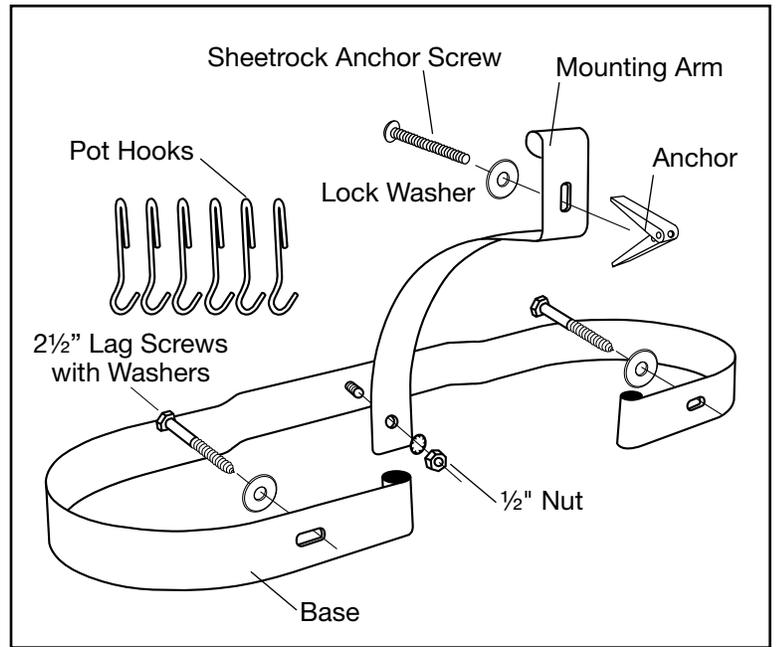

Rack Size: 27½" Length x 10" Width x 15" Height

Enclosed you will find everything needed for the proper assembly and use of your cookware rack. The parts and hardware included are:

- | | | |
|----------------------|----------------------------|---------------------------------|
| 1 - Oval Wall Base | 1 - ½" Nut | 2 - 2½" Lag Screws with Washers |
| 1 - Mounting Arm | 1 - Lock Washer | 6 - Angled Pot Hooks |
| 1 - Sheetrock Anchor | 1 - Sheetrock Anchor Screw | |

ASSEMBLY AND INSTALLATION INSTRUCTIONS

Please proceed carefully using the following instructions to ensure this rack is assembled properly for safe installation and use and without damage to the finish. Haste in assembly could result in needless scratching or marring of the stainless steel finish.

1. Unwrap rack and mounting arm from plastic covering.
2. Attach the arm to the rack body, using the lock washer and ½" nut. Tighten securely.
3. Identify mounting location and ensure at least the two base mounting holes are located directly over wall studs (wood studs).
4. Position rack assembly in desired location and mark fastening locations for base and mounting arm using rack holes provided.
5. Drill mounting holes and mount rack according to your situation:
 - a. For all-wood installation
 - i. Drill three holes as marked using a 7/32" drill bit (not provided).
 - ii. Hold rack in position (you may want assistance during this step) and fasten base to wall first using the 2½" lag screws and washers provided. Tighten securely.
 - iii. Finish by securing the mounting arm with the third 2½" lag screw and washer, tighten securely.
 - b. For wood and sheetrock installation
 - i. Ensure base mounting holes are located over wood wall studs.
 - ii. Drill base mounting holes as marked using a 7/32" drill bit (not provided).
 - iii. Drill mounting arm hole as marked using a 3/8" drill bit through sheetrock and install provided sheetrock anchor.
 - iv. Insert small washer on screw first, then larger washer second. Pass through bracket mounting hole and attach anchor to screw.

OVER PLEASE

- v. Hold rack in position (you may want assistance during this step) and fasten base to wall first using the 2½" lag screws and washers provided. Tighten securely.
 - vi. Finish by securing the mounting arm with the provided sheetrock anchor. Push toggle through sheetrock and tighten screw securely.
6. Your rack is now ready for use. Hang the angled pot hooks on the rack and distribute the weight of your 6 pieces of cookware evenly around the rack. **Each hook can hold up to 5 lbs. Do not overload.**
 7. The care and cleaning of our cookware racks must be done with a low-abrasive cleaner. A periodic cleaning will restore your rack to its original brilliance.

Note: The lag screws for the base must go into the solid wood of wall studs or into a wooden wall. The mounting arm must be secured with the lag screw for wood or the anchor/screw for sheetrock based on your situation. To install otherwise is incorrect. Your local hardware store can advise you if special hardware is needed for your particular situation.

WARNING It is important that your cookware rack be assembled and installed according to the above directions. If the unit is assembled and/or installed incorrectly, it could become unstable, collapse and possibly cause injury. Cuisinart is not responsible for any damage due to improper assembly or installation.

WARRANTY

LIFETIME WARRANTY (U.S. and Canada Only)

Your Cuisinart® Cookware Rack is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime.

HASSLE-FREE REPLACEMENT WARRANTY

Your ultimate satisfaction in Cuisinart products is our goal, so if your Cuisinart® Cookware Rack should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, email us at www.cuisinart.com/customer-care/product-assistance/product-inquiry. Or call our Consumer Service Center toll-free at **1-800-726-0190** to speak with a representative. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration or other damage to external or internal surfaces that does not impair the functional utility of the Cookware Rack. This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (a) to the store where it was purchased or (b) to another retail store that sells Cuisinart® products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at **1-800-726-0190**. To obtain a return shipping label, email us at www.cuisinart.com/customer-care/product-assistance/product-inquiry. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.