

Cuisinart® Kitchen Accessories

INSTRUCTION BOOKLET




Disc Holder

DLC-DH

Discs not included.

The Cuisinart® Disc Holder provides convenient, accessible and safe storage of Cuisinart® Food Processor Discs (except discs for DLC-X, DLC-XP, DLC-5, DFP-3 and LPP models).

Its compact construction saves counter space and allows for storage of three food processor discs. Each slot in the holder securely holds one disc with the cutting edge protected within the plastic barrier. The transparent door closes securely to protect the discs.

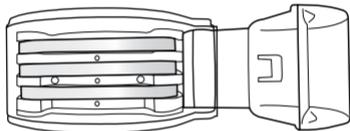


All discs, like sharp knives, should be stored out of the reach of children.

The compact Disc Holder can be used alone or in combination with additional Disc Holders. The Cuisinart® Disc Holder was designed so that additional disc holders can be stacked on top of one another for added storage space.


INSERTING DISCS

There are three slots in the Disc Holder. Each slot holds one food processor disc securely, with its cutting edge protected within the plastic barrier. To insert a disc,

hold the disc flat with the cutting side down and the stem attachment plate side facing up. The stem attachment plate should be on the side of the disc closest to you. See drawing for further clarification.

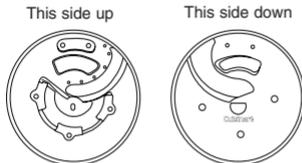

CAREFULLY hold the disc by the edge closest to you, avoiding the cutting area. This positions the disc for correct insertion into the Disc Holder. Insert the disc into the holder.

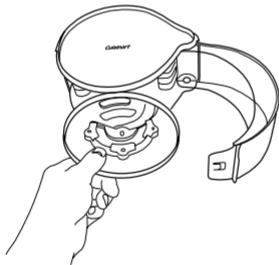

WARNING: CUTTING EDGE OF FOOD PROCESSOR DISC IS VERY SHARP. ALWAYS KEEP FINGERS AWAY FROM SHARP SIDE.

Please note: The discs may be inserted into the Disc Holder with the cutting side of the

disc facing up or down, as long as the stem attachment plate is on the side of the disc closest to you. See drawing on previous page. Practice placing the discs into the holder, following the instructions above, until you are comfortable inserting and removing discs from the holder.

Never try to force a disc into the Disc Holder. If inserted correctly, the disc will slide easily into the slot. Slide the disc straight into a slot. Discs will sit correctly and safely only when inserted this way.

Note: Discs with fixed stems will not fit into the Disc Holder. Discs for food processors with bowl capacities larger than 14 cups will not fit into the Disc Holder.

REMOVING DISCS

To remove a disc, grasp the disc by the edge and slide out gently, carefully avoiding the cutting area.

CAUTION: NEVER GRASP DISC BY THE BLADE EDGE.

USING THE DISC HOLDER WITH ADDITIONAL DISC HOLDERS

For expanded storage capacity, the Cuisinart® Disc Holder can be used with additional Disc Holders. The holder was designed so that it

can be stacked on top of another Disc Holder to create an attractive storage center to suit your food processor disc storage needs.



CLEANING AND CARE

The Disc Holder is made of a high-impact plastic that has a smooth, easy-to-clean surface. Occasionally wipe your Disc Holder with a cloth or sponge that has been dipped in warm, soapy water. To remove stubborn spots, use a mild soap solution, then wipe with a damp sponge. Do not put the Disc Holder in the dishwasher. Discs should always be clean when they are put into the Disc Holder. The Disc Holder is not meant for temporary storage of dirty discs between periods of use.

WARRANTY

CUISINART® DISC HOLDER
Limited 1-Year Warranty

This warranty is available to consumers only. You are a consumer if you own a Cuisinart®

Disc Holder which was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Disc Holder will be free of defects in materials and workmanship under normal home use for one year from the date of original purchase.

We suggest that you complete and return the enclosed product registration card promptly to facilitate verification of the date of original purchase. However, return of the product registration card does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Disc Holder should prove to be defective within the warranty period, we will repair it (or, if we think necessary, replace it) without charge to you. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190 or write to Cuisinart, 150 Milford Road, East Windsor, NJ 08520.

To facilitate the speed and accuracy of your return, please enclose \$3.00 for shipping and handling of the product. (California residents need only supply a proof of purchase and

should call 1-800-726-0190 for shipping instructions.) Please also be sure to include a return address, description of the product's defect, product serial number and any other information pertinent to the product's return. Please pay by check or money order.

Your Cuisinart® Disc Holder has been manufactured to the strictest specifications and has been designed for use only with authorized Cuisinart accessories, replacement parts or repair services other than those which have been authorized by Cuisinart.

This warranty does not cover damage caused by accident, misuse, shipment or other than normal household use.

This warranty excludes all incidental and consequential damages. Some states do not allow the exclusion or limitation of these damages, so they may not apply to you.

© 2004 Cuisinart
Cuisinart® is a registered trademark of
Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China
04CU13647