

QUICK REFERENCE GUIDE

Cuisinart®

Smart Stick® 700-Watt Hand Blender




INTRODUCTION

Get ready to experience a whole new level of blender versatility. Your Smart Stick® 700-Watt Hand Blender is a Potato Masher, too. A unique new attachment slips onto the power handle so you don't have to pull out your hand or stand mixer to make perfect mashed potatoes – it only takes seconds! This very powerful hand blender is also supremely multifunctional, with a chopper/grinder and chef's whisk that attach to the 700-watt motor body housing. Take a look at our recipes to find out even more you can do with this Smart Stick®!

FEATURES AND COMPONENTS

- 1. Variable Speed Control Dial**
Allows you to select speed and gradually adjust during blending if desired.
- 2. Lock/Unlock Button**
Must be pressed to unlock before power handle will operate.
- 3. On/Off Power Button:**
Allows you to activate the hand blender at the touch of a button after unlocking. Simply unlock, then press and hold down to blend or pulse. Once the button is released, blending will stop.
- 4. Comfort Grip Handle:**
The handle allows you to control the hand blender with ease.
- 5. Motor Body Housing:**
Houses the powerful 700-watt motor.
- 6. Blending Attachment:**
This attachment easily snaps into the motor body housing. The fixed stainless blade is partially covered by a stainless housing steel blade guard that keeps splashing to a minimum. Press the release button on the back of the unit to detach for easy cleaning.

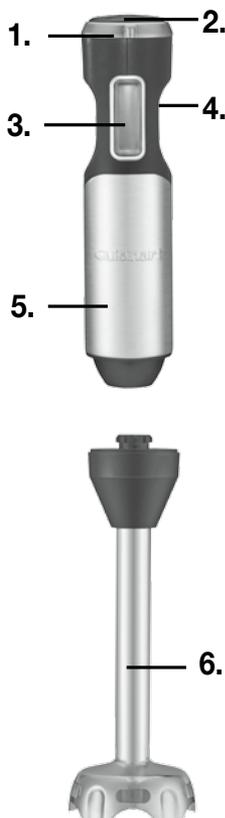

OPERATING INSTRUCTIONS

BLENDING

Select Speed. Press and hold the Lock/Unlock button on top of the motor housing and press the power button to turn motor on. Once motor is on, you can release the Lock/Unlock button but continue to hold in the power button. You can also press the power button first, holding it down as you press the Lock/Unlock button to turn motor on. Speed can be gradually adjusted at any time during blending. Do not hold power button down for more than 60 seconds at a time.

CAUTION: DO NOT PUT FINGERS NEAR BLADE. TO DISLODGE FOOD, UNPLUG HAND BLENDER FROM THE OUTLET FIRST.

PULSE

To Pulse, press and hold the Lock/Unlock button while pressing and releasing the power button as desired.

MASHING POTATOES

1. Be sure potato masher is securely assembled.
2. Put potatoes or other food to be mashed in large bowl or pot.
3. Plug in unit and place head of potato masher into food.
4. Unlock and push power switch to turn masher on.
5. Slightly raise and lower masher as you move it through food until it reaches texture you want.
6. Release power button to turn off masher before you lift it away from the food.
7. Unplug unit.

ASSEMBLY

POTATO MASHER ATTACHMENT

Your potato masher attachment comes fully assembled.

1. Align the gear box at the end of the potato masher with the motor body housing and push gearbox and housing together until you hear and feel them click.
2. Plug the motor housing into an electrical outlet.
NOTE: Gearbox detaches from potato masher shaft for cleaning and storage.

To reassemble potato masher after cleaning (see Cleaning Potato Masher Attachment, pg.10)

1. Align the triangle mark on the gear box with the unlock symbol on the potato masher shaft.
2. Rotate the gear box clockwise until you hear it click and lock into place on the shaft.
3. Place blade onto hub at the wide end of shaft, push down, and twist counterclockwise to secure.
NOTE: Blade cannot be put on or taken off unless gear box is firmly attached to the shaft.



IMPORTANT!

Do not discard. Read before operating your new Smart Stick® 700-Watt Hand Blender. Keep for further reference.

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure proper operation and optimum performance, please read the entire Instruction Booklet.