

Cuisinart®

Kitchen
Accessories

INSTRUCTION BOOKLET



Blade and Disc Holder

BDH-2


The Cuisinart® Blade and Disc Holder provides convenient, accessible and safe storage of all Cuisinart® Food Processor (except DLC-X, DLC-XP, DLC-5 and LPP models) accessories. The unit holds: one stainless steel blade, one plastic or metal dough blade, one detachable disc stem, and three food processor discs.

The transparent cover locks to the base with a tamper and child-resistant lock that will not open if the Blade and Disc Holder should tip over.

All blades and discs, like sharp knives, should be stored out of the reach of children.

The compact Blade and Disc Holder can be used alone or in combination with the Cuisinart® Disc Holder (model # DH-4).

OPERATING THE LOCK

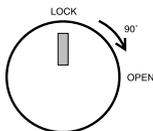

To open the child-resistant lock, pull the knob out toward you and turn clockwise 90°. This sequence will unlock the lock. Gently lift up the transparent cover. Do not

force the cover open when the knob is in the “locked” position. The knob will automatically return to the locked position when the cover is closed.


CAUTION: Do not twist the lock back to the “locked” position when the transparent cover is open, as doing so may break the lock.

INSERTING ACCESSORIES

The Blade and Disc Holder stores a metal blade in the left triangular cavity and a plastic or metal dough blade in the lower center triangular cavity. Hold each piece carefully by the center hub, and insert with its upper blade facing down. **WARNING: DO NOT TOUCH METAL BLADE, AS DOING SO MAY RESULT IN INJURY.**

The detachable disc stem fits in the round opening in the upper center section of the Blade and Disc Holder. Insert the disc stem face down, with the rounded left side of the semi-circular connector towards the back.

Icons embossed on the inside surface of the Blade and Disc Holder show proper placement of the blades and detachable disc stem.

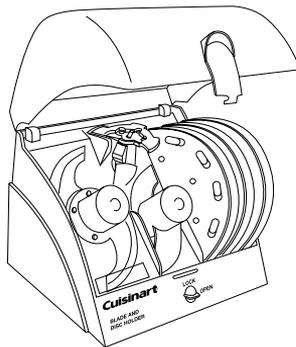


INSERTING AND REMOVING DISCS

INSERTING DISCS

There are three disc slots on the right side of the Blade and Disc Holder. Each slot holds one food processor disc securely, with disc cutting blade totally protected behind a plastic barrier. To insert a disc, hold it so the cutting side faces left and the disc stem connector side faces right. Grasp the disc by placing your thumb on the edge of the disc and your fingers under the center lock on the stem attachment plate.

This positions the disc for correct insertion into

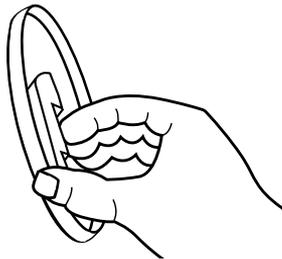

the holder. **WARNING: CUTTING EDGES OF FOOD PROCESSOR DISCS ARE VERY SHARP. ALWAYS KEEP FINGERS AWAY FROM SHARP SIDE.**

Never try to force a disc into the holder.

If inserted correctly, the disc will slide easily into the slot. Slide the disc straight into a slot. The disc will slip securely into place, with its cutting blade behind the plastic barrier. Discs will sit correctly and safely only when inserted in this manner.

Note: Discs with fixed stems will not fit into the Blade and Disc Holder.

REMOVING DISCS

To remove a disc, grasp the disc by placing your thumb on the edge of the disc and your fingers under the center lock on the stem attachment plate. Pull the disc straight out.

CAUTION: NEVER GRASP A DISC BY THE BLADE EDGE.

CONNECTING TO DISC HOLDER

For expanded storage capacity, the Cuisinart® Blade and Disc Holder can be used with the Cuisinart® Disc Holder (model DH-4). The two holders were designed with similar lines and curves to create an attractive storage center when placed side by side. You can create any combination of Blade and Disc Holders and Disc Holders to suit your food processor accessory storage needs.

CLEANING AND CARE

The Blade and Disc Holder is made of a high-impact plastic that has a smooth, easy-to-clean surface. Occasionally wipe your Blade and Disc Holder with a cloth or sponge that has been dipped in warm soapy water. To remove stubborn spots, use a mild soap solution, then wipe with a damp sponge. **Do not put the Blade and Disc Holder in the dishwasher.** Blades, disc stem and discs should always be clean when they are put into the Blade and Disc Holder. The Blade and Disc Holder is not meant for temporary storage of soiled blades between periods of use.

WARRANTY

CUISINART® BLADE AND DISC HOLDER LIMITED 1-YEAR WARRANTY

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Blade and Disc Holder which was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners.

We warrant that your Cuisinart® Blade and Disc Holder will be free of defects in materials and workmanship under normal home use for 1 year from the date of original purchase.

We suggest that you complete and return the enclosed warranty registration card promptly to facilitate verification of the date of original purchase. However, return of the card is not a condition of this warranty and does not eliminate the need for the consumer to maintain the original proof of purchase. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Blade and Disc Holder should prove to be defective within the warranty period, we will repair it (or, if we think necessary, replace it) without charge to you. To obtain warranty service, please call our Customer Service Center toll-free at 800-726-0190 or write to Cuisinart, 150 Milford Road, East Windsor, NJ 08520.

To facilitate the speed and accuracy of your return, please also enclose \$3.00 for shipping and handling of the product.

California residents need only supply a proof of purchase and should call 1-800-726-0190 for shipping instructions. Please also be sure to include a return address, description of the product's defect, product serial number and any other information pertinent to the product's return. Please pay by check or money order.

Your Cuisinart® Blade and Disc Holder has been manufactured to the strictest specifications and has been designed for use only with authorized Cuisinart® accessories and replacement parts. This warranty expressly excludes any defects or damages caused by accessories, replacement parts or repair services other than those which have been authorized by Cuisinart.

This warranty does not cover damage caused by accident, misuse, shipment or other than ordinary household use.

This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so they may not apply to you.

©2003 Cuisinart
Cuisinart® is a registered trademark
of Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China
03CU13011

IB-2838C