

## LIFETIME WARRANTY

Your Cuisinart® Porcelain Enamel Teakettle is warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime. If your kettle should prove to be defective within your lifetime, we will repair it (or, if we think it necessary, replace it) without charge to you, except for shipping and handling. To obtain warranty service, please call our Consumer Service Center toll-free at 1-800-726-0190, or write to Consumer Service Center, Cuisinart, 150 Milford Road, East Windsor, NJ 08520.

To facilitate the speed and accuracy of your return, please enclose \$7.00 for shipping and handling of the product. Be sure to include a return address, description of the product problem, phone number, and any other information pertinent to the product's return. Please pay by check or money order.

This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration or other damage to external or internal surfaces that does not impair the functional utility of the cookware.

This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

### CALIFORNIA RESIDENTS ONLY

California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions. California law provides that for In-Warranty Service, California residents have the option of returning a non-conforming product (a) to the store where it was purchased or (b) to another retail store that sells Cuisinart products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

©2015 Cuisinart

150 Milford Road, East Windsor, NJ 08520

Printed in China 14CW009338

Any trademarks or service marks of third parties used herein are the trademarks or service marks of their respective owners.

IB-10584A

# Cuisinart®



PORCELAIN ENAMEL TEAKETTLES

USE AND CARE GUIDE

# PORCELAIN ENAMEL KETTLES

*Congratulations on your purchase of a Cuisinart® Porcelain Enamel Teakettle! Designed from the inside out for today's lifestyles, our Cuisinart® Porcelain Enamel Teakettle combines uncompromising superior performance and convenience with a professional look.*

*Cuisinart proudly offers the highest quality in kettles, and your teakettle is an investment that will prove its worth every time you use it. When properly cared for, Cuisinart products will give you countless years of service and pleasure. Follow the use and care suggestions in this leaflet to preserve and maintain the original quality of your kettle.*

---

## ■ ESSENTIAL PRECAUTIONS

Never use Cuisinart® Kettles on high heat. A low to medium heat setting is recommended. To boil water in your kettle, a medium-high setting is sufficient. **Never set the burner on high.** Never leave your Cuisinart® Kettle or any cookware empty over a hot burner. You may ruin the kettle or pan if left empty over a hot burner and may even cause damage to the stovetop.

## ■ BEFORE INITIAL USE

Wash kettle in warm water with a mild soap or dish detergent before using for the first time. Rinse thoroughly and wipe dry immediately with a soft dishtowel. **Never wash your Cuisinart® Porcelain Enamel Teakettle in the dishwasher.**

## ■ SERVING TIME

The sleek design and stylish colored enamel exterior of your porcelain enamel teakettle makes it an elegant enough vessel for serving. When serving, be sure to place the hot kettle on a heat-resistant surface or trivet before placing on counter or table.

## ■ EASY MAINTENANCE

Immediately after each use, fill the kettle with warm water and liquid dish detergent or baking soda, and let soak if needed. Use a sponge or soft cloth to remove any remaining residue. Do not use steel wool or other metal pads that make coarse scratches. Rinse thoroughly and dry immediately for a flawless finish.

## ■ USING OVER A GAS BURNER

When using a gas stovetop, make sure the flame is concentrated and touches only the kettle bottom. If the flame comes up the sides of the kettle, energy is wasted and there is a risk that the sides of the kettle may become permanently discolored.

## BEFORE FIRST USE:

1. Remove any labels/hang tags. If your kettle has a max fill label (porcelain types) **DO NOT** remove it from the kettle.
2. Wash in warm soapy water and rinse thoroughly.

## USAGE INSTRUCTIONS:

3. Fill the kettle only up to the **MAX FILL** mark. **DO NOT OVERFILL.**
4. Kettle should be placed on a burner no larger than the bottom of the kettle.
5. For whistling kettles, when you hear the whistle, turn off the burner, remove the kettle from the burner and wait for approximately 20 seconds until the water ceases to boil. **DO NOT POUR BOILING WATER.** Always use a pot holder or mitt when pouring. Handles may become hot, especially if other pots are being heated on the range.
6. Do not attempt to pour from the kettle unless the lid is snapped closed/locked in place.
7. Depending upon where you live, some water may have excessive amounts of minerals in it. Periodically remove mineral deposits by boiling water with 2 tablespoons of baking soda and the juice of half a lemon. Do not use steel wool or harsh abrasives to clean your kettle.
8. Do not place an empty kettle on a hot burner.
9. **NEVER ALLOW YOUR KETTLE TO BOIL DRY.** A kettle that has been boiled dry may be damaged and should not be used. Electric burners may also be damaged when a kettle is boiled dry.
10. Stainless steel kettles should be cleaned with a soft cloth. Stainless steel cleaners may be used on the exterior surfaces.
11. Those living in areas with high mineral content water may need to use a commercial lime removal product. Follow package directions.
12. **NEVER** wash your kettle in a dishwasher.