

QUICK REFERENCE GUIDE

Cuisinart®

Cuisinart™ Tazzaccino™ Milk Frother



BEFORE THE FIRST USE

Carefully unpack the unit and remove any packaging and promotional labels in or on the milk frother. Rinse all accessories thoroughly in warm soapy water and then dry completely.

Milk Frothing Whisk

aerates milk to
create creamy
foam



Milk Warming Stirrer

stirs milk as it
heats to prevent
burning



OPERATING INSTRUCTIONS

Frothing Milk

1. Remove the cap and insert the milk frothing whisk, in the recess in the bottom of the housing.

2. Fill the tank with the desired amount of milk.

Note: Never fill milk over the MAX fill line. Frothed milk expands and it will overflow the tank if the level is too high.

3. Put the cap back on the tank.

4. Start frothing by pressing the corresponding Milk Button (top position button for HOT and bottom position button for COLD). The LED light will be illuminated during operation.

Note: Preparation stops automatically after 2 minutes, depending on the filling level.

5. Open the cap after frothing is complete.

6. Pour the milk froth into a cup or glass.

7. After using the unit, clean it as described in the Cleaning and Maintenance section of the IB (see other side and see also Instruction Booklet).

Note: Wait for tank to cool before cleaning.



OPERATING INSTRUCTIONS CONTINUED

Warming Milk

1. Remove the cap and insert the milk warming stirrer, in the recess in the bottom of the housing.
2. Fill the tank with the desired amount of milk.
Note: Never fill milk over the MAX fill line.
3. Put the cap back on the tank.
4. Start warming milk by pressing the corresponding Hot Milk Button (top position). The LED light will be illuminated during operation.



5. Open the cap after warming is complete.
6. Pour the warmed milk into a cup or glass.
7. After using the unit, clean it as described in the Cleaning and Maintenance section below and in the Instruction Booklet.

Note: Wait for tank to cool before cleaning.

CLEANING AND MAINTENANCE

Always make sure the appliance is unplugged before you start cleaning it.

1. Clean the exterior of the unit with a soft, moist cloth. If heavily soiled, a mild detergent can be used.
2. Remove the whisk or stirrer from tank and rinse them under warm running water. Seal on cover can also be removed and rinsed under warm water.
3. Clean out the tank with hot water and a soft cloth after use. If the tank is still soiled, wash using a soap solution and rinse thoroughly. Use a soft cloth to prevent damaging the nonstick coating.

CAUTION: Never submerge the base, the power cord or plugs in water or other liquids.

IMPORTANT

Do not throw away. Read before operating your new Milk Frother. Keep for future reference.

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure safe operation and optimum performance, please read the entire Instruction Booklet.

For more helpful hints see Instruction Booklet