


Cuisinart®


Outdoor Grilling Products

INSTANT READ THERMOMETER Model NO: CGWM-070

USER MANUAL

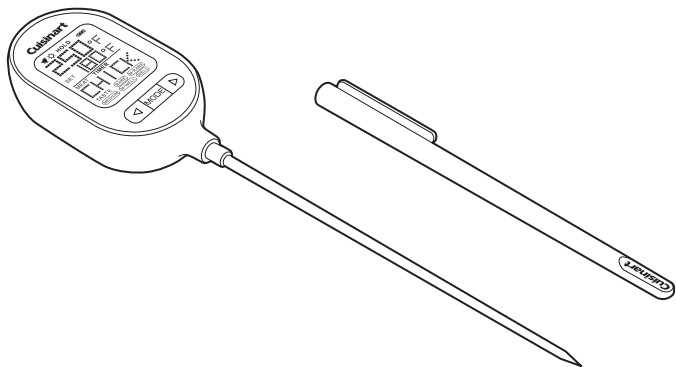


PACKAGE CONTENTS

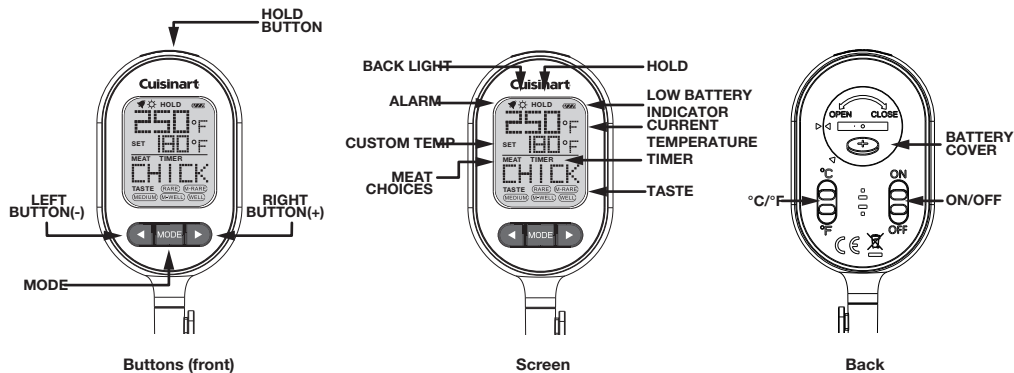

OPERATING INSTRUCTIONS

 1. Remove the storage sleeve and pull off the insulation film on the back side of the product.
2. Slide ON/OFF switch to "ON" on the back side of thermometer.
3. Slide °C/°F switch to "°C" to display Celsius or "°F" to display Fahrenheit.
4. Custom temperature mode
(1) "MEAT" mode and "BEEF-RARE" are set by default. Press ◀ and ▶ to switch to "USER" and other meat. Press "MODE", it will flash, press ◀ or ▶ to switch to meat (BEEF-LAMB-VEAL-PORK-FISH-CHICK-TURKY-BURG-USER-BEEF) Press "MODE" to select one meat, then press ◀ or ▶ to select taste, press "MODE" to confirm taste, MEAT and TASTE will flash 2S.
(2) Press ◀ or ▶ to switch to "USER", Press "MODE" to set temperature. "--" stands for no selected alarm temperature. Press ◀ or ▶, "--" starts at 50°C by default. Press "MODE" to confirm the selected temperature. Temperature reset: press "MODE" and then press ◀ and ▶ in the same time, it will show "--", then press "MODE". To set temperature, press ◀ or ▶. Press left button to minus or right button to add. Press and hold in for 2S to fast-forward or fast-backward. Confirm desired temperature. If you set "⚡⚡" it will beep and the LCD will flash when temperature is finished. Press any button to cancel the alarm.
5. Temperature function:
Insert the thermometer into the thickest part of the meat or poultry. The tip should be at least 1 inch into the meat or poultry but not in contact with bone or gristle. When the temperature is stable, press "HOLD" to lock the temperature on screen ("HOLD" appears on screen). Remove the thermometer to check whether the desired temperature is reached. If not, press the "HOLD" button again to release the locked-in temperature and display current temperature ("HOLD" disappear on screen). Repeat the above steps until the desired temperature is reached.
6. Backlight/Alarm mode option.
Turn on the backlight and alarm by default, press "HOLD" for 2S to enter backlight and alarm setting, it's set mode icon flash, press "HOLD" to switch mode.
Press "HOLD" for 2S, the corresponding icon will flash 3 times, confirm the desired mode and exit select status. Without confirming manually selected mode after 5S, it will confirm automatically and exit mode selection. Under the status of mode selection, other buttons can not trigger functions. Exit the mode selection state to trigger button setting function.
7. Timer count-up or count-down:
Hold down "MODE" for 2s to switch between meat choice/timer mode.



To set a count-down time, press ◀ or ▶ to set "H" and "M", press left button to minus, press right button to add, press and hold for 2S to fast-forward or fast-backward. Press "MODE" to confirm the setting of "H" or "M". Press "MODE" to begin or pause counting under TIMER mode, if you set "⚡⚡" it will beep and the LCD will flash when count-down is finished. Press any button to cancel the alarm.
To pause the timer, press ◀ and ▶ in the meantime to reset to zero. Slide switch to "OFF" to conserve battery life when you finish cooking.
To start a count-up, start from zero, the timer will count up to 23 hours, 59 minutes.



8. DONNESS CHART

TASTE MEAT	WELL	M-WELL	MEDIUM	M-RARE	RARE
BEEF	77°C	74°C	71°C	66°C	63°C
	171°F	165°F	160°F	151°F	145°F
LAMB	77°C	74°C	71°C	63°C	
	171°F	165°F	160°F	145°F	
VEAL	77°C	74°C	71°C		
	171°F	165°F	160°F		
PORK	77°C	74°C	71°C		
	171°F	165°F	160°F		
FISH	70°C				
	158°F				
CHICKEN	82°C				
	180°F				
TURKEY	82°C				
	180°F				
BURGER	74°C				
	165°F				

9. Conditions of automatic sleep mode

- 1) Without count-up or count-down.
- 2) Current temperature is less than 50°C.
- 3) No button actions in 10 min.
- 4) Temperature change shall not exceed 3°C.
- 5) Automatic entry into sleep mode.

Press any button to wakeup the devices from sleep mode.


10. Battery installation

When "Low" appears on the screen, replace with a new battery to keep the thermometer operating as normal.


Locate the battery compartment on the back of thermometer. Remove by twisting counter-clockwise.

Remove the flat battery and replace with a CR2032 button cell battery, matching the polarities(+/-).


Secure the battery compartment by twisting clock-wise. Refer to the figures below.

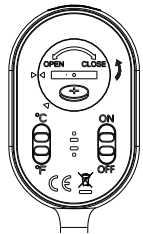


Twist counter-clockwise

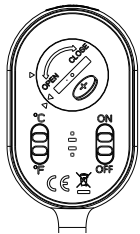

Match triangle markers

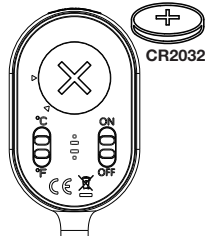

Replace with a new battery

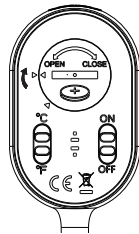

Twist clock-wise

▲ SAFETY INFORMATION

Please read and understand this entire manual before attempting to assemble, operate, or install the product.

WARNING:

1. Do not leave in an oven or grill during cooking. Do not put in the dishwasher. Not for microwave use. Clean by hand.
2. Handle with care. Thermometer probe may become hot during use.
3. Remove battery if the thermometer will not be used for a long period of time.
4. Chemical burn hazard. Keep battery away from children. The cell should be disposed of properly. Even used cells may cause injury.
5. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours.
6. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove battery, and keep it away from children. If you think battery might have been swallowed or placed inside any part of the body, seek immediate medical attention.

MAINTENANCE

Wash meat probe by hand with only mild soap and hot water, rinse thoroughly, and dry thoroughly with a soft cloth.

DO NOT RETURN PRODUCT TO THE STORE

Before visiting your local retailer, call our customer service department at **1-866-994-6390** from 9:00 am to 8:00 pm Eastern time, Monday through Friday.

© 2019 Cuisinart

Cuisinart® is a registered trademark under license to The Fulham Group.
Distributed by The Fulham Group, Newton, MA 02466 U.S.A. **MADE IN CHINA**

One Year Limited Warranty

This quality product is warranted to be free from defects in material, construction, and workmanship.

Model # CGWM-070
North American Distributor:
The Fulham Group
Newton, MA 02466