

Cuisinart™



Magnetic LED Smoker & Grill Light CGL-2004 INSTRUCTIONS

Set Up

1. Unscrew battery compartment with a small Phillips Head Screwdriver, located on the back of the head of light
2. Insert 3AAA Batteries (not included)
3. Place the battery compartment on the head of the light and tighten all 4 screws

Use and Care

1. Turn the light on/off by pressing the Power Button found in the middle of the light
2. Adjust the arm to best suit your grilling or smoking needs
3. Wipe clean with a lightly moist towel
4. Store in dry place

IMPORTANT: Do not leave out overnight especially in inclement weather. This light is not waterproof.