

Cuisinart®

STAINLESS STEEL FOOD MILL



Instruction Booklet

CTG-00-FM2

CONTENTS

Important Safeguards	2
Assembly & Use Instructions	3–4
Changing Discs	4
Safety & Cleaning Rules	4–5
Food Tips	5
Warranty	6–7

SAVE THESE INSTRUCTIONS

Please read the following operational information before using the Stainless Steel Food Mill.

Important Safeguards:

Read and follow operating instructions and warnings to familiarize yourself with the food mill before using. Review instructions and warnings periodically to maintain awareness.

Before Using:

Wash all parts of the food mill with hot, soapy water, rinse, and wipe dry.

Assembly & Use Instructions

1. Place the milling disc of your choice into the center of the food mill with the dome-shaped surface facing up.
2. Insert the handle pin into the center hole of the milling disc.
3. Position the locking bar so that both sides are located beside both locking tabs.
4. Firmly push down on the locking bar and rotate clockwise, until it is lined up with the locking tabs.
5. Slowly release the locking bar and make sure it is properly connected to the locking tabs.
6. Place the food mill over a bowl or saucepan and add the food to be milled into the food mill.
7. Turn the handle clockwise, turning the blades over the milling disc to mill the food.
8. The mashed food will fall through the perforations and into the bowl. It may be necessary to scrape food off of the outside of the milling disc and into the bowl using a rubber spatula.
9. Discard any skin, seeds or fiber left in the food mill after mashing is complete.

Figure 1

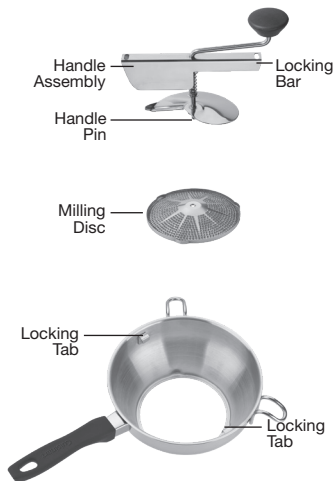


Figure 2



10. It is best to clean the food mill immediately after use to prevent food from drying in the holes of the milling disc.

PRIOR TO USING

It is best to pre-soften some foods prior to use. If the food is firm, like potatoes, apples and pears, remember to soften them by steaming or baking until tender before using them in the food mill.

Changing Discs

1. Carefully press down on the locking bar and rotate the locking bar counterclockwise to release the handle assembly from the food mill housing.
2. Remove the milling disc from the bottom of the food mill housing.
3. Place the new milling disc into the center of the food mill with the dome-shaped surface facing up.
4. Follow the assembly instructions numbers 2–5 to complete the assembly of the food mill.

Safety & Cleaning Rules

1. Before and after each use, disassemble and wash all parts of the food mill that come into contact with food. Wash in hot, soapy water. Rinse with clear water. Dry immediately. The food mill is top-rack dishwasher safe.
2. Check that all parts are operating properly and perform the intended functions. Check for alignment of moving parts or any other conditions that may affect the operation. If the product is not working properly contact Consumer Service.
3. Never use fingers to scrape food away from the milling disc while

the unit is in operation. Severe injury may result.

4. Do not attempt to grind bones, nuts or other hard items. Grinding food other than what the food mill was intended for will void the warranty.
5. The manufacturer declines any responsibility in the case of improper use of this unit.

Food Tips

- No peeling or coring required to make your favorite applesauce! Use the fine disc for smooth; medium disc for chunky.
- Add just the right texture to your mashed potatoes with the medium or coarse disc.
- Make homemade gnocchi quickly and easily; the medium disc is ideal for ricing potatoes.
- Purée tomatoes without time-consuming prep. Skins and seeds are removed when milling, making creating a delicious tomato-based sauce simple.
- Make homemade baby food with your own carefully selected ingredients; use the fine disc to purée peas, carrots, squash and more.
- Turn blueberries, strawberries and raspberries into preserves, jellies and jams with the medium and fine discs.

WARRANTY

LIFETIME WARRANTY (U.S. and Canada ONLY)

Cuisinart® Tools & Gadgets are warranted to be free of defects in material and workmanship under normal home use from the date of original purchase throughout the original purchaser's lifetime.

HASSLE-FREE REPLACEMENT WARRANTY

Your ultimate satisfaction in Cuisinart products is our goal, so if your Cuisinart® Tool or Gadget should fail within the generous warranty period, we will repair it or, if necessary, replace it at no cost to you. To obtain a return shipping label, email us at

www.cuisinart.com/customer-care/product-return. Or call our toll-free customer service department at 1-800-726-0190 to speak with a representative. This warranty excludes damage caused by accident, misuse or abuse, including damage caused by overheating, and it does not apply to scratches, stains, discoloration or other damage to external or internal surfaces that does not impair the functional utility of the tool/gadget. This warranty also expressly excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the foregoing limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

CALIFORNIA RESIDENTS ONLY

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (a) to the store where it was purchased or (b) to another retail store which sells Cuisinart® products of the same type. The retail store shall then, according to its preference, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility, if service or repair can be economically accomplished. Cuisinart, and not the consumer, will be responsible for the reasonable cost of such service, repair, replacement or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190. To obtain a return shipping label, email us at **www.cuisinart.com/customer-care/product-return**. Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such nonconforming products under warranty.

Cuisinart®



Coffeemakers



Food
Processors



Toaster Ovens



Wafflemakers



Cookware



Ice Cream
Makers

Cuisinart offers an extensive assortment of top quality products to make life in the kitchen easier than ever. Try some of our other countertop appliances and cookware, and Savor the Good Life®.

www.cuisinart.com

©2020 Cuisinart
East Windsor, NJ 08520
Printed in China

20CT073968

IB-14166