

Cuisinart®

INSTRUCTION BOOKLET



BC

Salt, Pepper and Spice Mill

SG-3

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed, including the following:

1. **READ ALL INSTRUCTIONS.**
2. To protect against electrical shock, do not put the charger base or motor body of this appliance in water or other liquid. Never submerge any other portion of this unit. If any part falls into liquid, remove immediately. Carefully remove, clean and dry unit thoroughly before continuing.
3. Do not operate in the presence of explosive and/or flammable fumes.
4. Unplug charger base from outlet before cleaning.
5. Charger base should be plugged into an electrical outlet away from sink or hot surfaces.
6. Do not use an extension cord. Plug charger base adapter directly into an electrical outlet.
7. Do not use appliance for other than intended use.
8. **Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way, or is not operating properly. Return the appliance to the nearest Cuisinart Repair Center for examination, repair, or mechanical or electrical adjustment.**
9. The use of attachments or accessories not recommended by Cuisinart may cause fire, electrical shock or risk of injury.
10. This appliance is intended for household use only and not for commercial or industrial use.
11. Do not operate a damaged charger. Have damaged charger replaced immediately.
12. Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.
13. **Do not incinerate the mill, even if it is damaged. Severe injury can occur if the batteries are placed in a fire.**
14. This product contains, nickel-metal hydride (NiMH) batteries, which must be recycled at the end of the life of the product and disposed of properly. (See Disposal/ Recycling of Batteries, page 6.) **Do not incinerate or compost batteries, as risk of severe injury can occur at high temperatures.**
15. Leaks from battery cells can occur under extreme conditions. If the liquid, which is a 20–35% solution of potassium hydroxide, gets on the skin, (1) wash quickly with soap and water or (2) neutralize with a mild acid such as lemon juice or vinegar. If the liquid gets into eyes, flush them immediately with clean water for a minimum of 10 minutes. Seek medical attention.
16. Close supervision is necessary when any appliance is used by or near children.
17. Avoid contacting moving parts.
18. Do not use outdoors.
19. Do not let cord hang over edge of table or counter.
20. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

CONTENTS

Important Safeguards	2
Parts and Features	3
Assembly	4
Operation	5
Quick Tips	6
Charging & Battery Life	6
Cleaning and Maintenance	6
Disposal/Recycling of Batteries	6
Warranty	7

PARTS AND FEATURES

1. Measuring Cap

1 teaspoon capacity

2. Removable Grinding Containers

Clear for easy viewing, and hold large portions for less refills

3. Rechargeable Batteries (Not Shown)

4. Comfort Grip Housing

Ergonomically designed for comfort and ease of use

5. On/Off Button

Operates mill when pressed

6. Charging Base

Plugs into outlet and brings unit to full recharge

7. Spice Catcher

Removable tray easily discards leftover spices

8. Charge/Ready Light

Illuminates red when charging and blue when fully charged.

9. Adjustable Grind Dial

Choose from 5 set positions from coarse to fine

10. Grind Directional Arrows

Indicates which direction to turn the adjustable grind dial for desired setting

11. Cord Storage (not shown)

12. BPA Free (not shown)

All materials that come in contact with food are BPA free.



ASSEMBLY


To assemble your Cuisinart® Salt, Pepper and Spice Mill for use:

1. Place housing and all removable parts on a clean, flat surface. Make sure that all parts have been cleaned and dried thoroughly before assembling.

2. Attach grinding container(s) to the unit housing. **NOTE:** It is best to attach the grinding container from the bottom while holding the unit upright. See fig.1.



3. Line up the arrow on the grinding container with the arrow on the unit housing. **NOTE:** Both arrows should face each other. This will indicate the grinding container and unit are properly aligned. See fig.2.

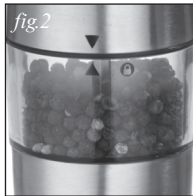


4. Gently push the grinding container and unit housing together. The grinding container will fit together comfortably with the unit housing. See fig.3.



5. Secure the grinding container in place by twisting the grinding container clockwise so that the arrow on the unit housing is now aligned with the lock symbol on the grinding container. **NOTE:** The two pieces will click together indicating proper assembly. See fig.4.



6. To attach the second grinding container, flip the unit housing over and repeat assembly instructions. See fig.5.

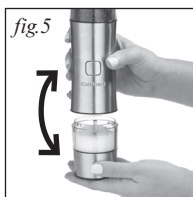

7. Your Cuisinart® Salt, Pepper and Spice Mill is now assembled. See fig.6.



For use with measuring cap:

1. To use the measuring cap on either grinding container, grasp the measuring cap and connect to grinding container by aligning the grooves on the measuring cap with the ridges in the grinding container. See fig.7.



2. Press together until the ridge of the measuring cap rests flat against the grinding container. **NOTE:** When not in use, the measuring cap should remain in the uppermost grinding container, as the unit housing will not fit into the charging base if the measuring cap is on the lower container.


To assemble charging base for use:

1. Place housing, charging base and all removable parts on a clean, flat surface. Make sure that all parts have been cleaned and dried thoroughly before assembling.

2. Place the removable spice catcher into the charging base so that it fits securely. **NOTE:** The spice catcher will only fit into the charging base one way. See fig.8.



3. Connect power adapter to the charging base by grasping the pin on the power adapter and inserting it vertically into the back of the charging base until secure. **NOTE:** Do not insert power adapter into the charging base while power adapter is plugged into a power source. See fig.9.

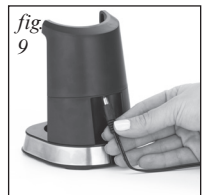

CHARGING INSTRUCTIONS

To charge your Cuisinart® Salt, Pepper and Spice Mill for use:

1. Follow **assembly instructions** for the Cuisinart® Salt, Pepper and Spice Mill and charging base on page 4 to properly assemble for charging.

2. Grasp assembled unit securely and make sure it is facing upright. The Salt, Pepper and Spice Mill is facing upright when the Cuisinart® logo on the front of the unit is in proper reading orientation (easy to read and horizontal.) See fig.10.



3. Place the fully assembled Salt, Pepper and Spice Mill in the charging base so that the recessed area on the back of the unit housing fits comfortably with the protrusion on the charging base. See fig.11.



4. Plug charging base into a 120v power outlet. Your unit is now charging for use. **NOTE:** Unit is properly charging if red LED illuminates from charging base. See fig.12.



OPERATION INSTRUCTIONS

1. Place housing and all removable parts on a clean, flat surface. Make sure that all parts have been cleaned and dried thoroughly and properly assembled before use.
2. Attach grinding container(s) to the unit housing with sea salt, peppercorns, or desired dried spice. **NOTE:** It is best to

attach the grinding container from the bottom while holding the unit upright.

3. Line up the arrow on the grinding container with the arrow on the unit housing. **NOTE:** Both arrows should face each other. This will indicate the grinding container and unit are properly aligned.
4. Gently push the grinding container and unit housing together. The grinding container will fit together comfortably with the unit housing.
5. Twist the grinding container clockwise so that the arrow on the unit housing is now aligned with the lock symbol on the grinding container. **NOTE:** The two pieces will click together indicating proper assembly.
6. To attach the second grinding container, flip the unit housing over and repeat operating instructions.
7. Press the On/Off button in the center of the unit housing to begin grinding. **NOTE:** Only the bottom container will yield any grinding results. Even though the grinding container facing upward will rotate, no grinding will actually take place.

For use with measuring cap:

To use the measuring cap on either grinding container, grasp the measuring cap and connect to grinding container by aligning the grooves on the measuring cap with the ridges in the grinding container. Press together until the ridge of the measuring cap rests flat against the grinding container. **NOTE:** **The measuring cap can be used on either container during operation only.** When not in use, the measuring cap should remain in the uppermost grinding container as the unit housing will not fit into the charging base if the measuring cap is on the lower container.

ADJUSTING THE GRIND

To adjust the grind from fine to coarse, use the adjustment dial on the underside of the mill. Clockwise for a finer grind and counterclockwise for a coarser grind.



QUICK TIPS

- Before first use, the batteries must be charged for 13 hours.
- To clear a peppercorn that is stuck in the grinding wheel you may either:
 1. Turn the mill upside down and shake gently while pressing the On/Off power button.
 2. Turn the mill upside down and position the grind selector to coarse, then hold over a plate and grind until peppercorn is dislodged.
- Never use moist or wet spices in the mill. This will clog the grinding mechanism. We recommend using only store-bought dried spices.
- To improve battery performance, it is recommended that you occasionally unplug the charging base and run the mill until its battery is fully discharged and it stops operating. Once discharged, plug the charging base back into the electrical outlet and recharge the mill for 13 hours. This procedure improves battery capacity and should be repeated every 2–3 months.
- Clean the mill and base by simply wiping all parts with a damp cloth and thoroughly drying. Do not place in the dishwasher. Avoid wetting battery contacts.

CHARGING & BATTERY LIFE

Your Cuisinart® Salt, Pepper and Spice Mill is equipped with NiMH batteries. We have selected these batteries to give you maximum battery life and long running times.

If batteries should run down completely, it will take between 8 and 13 hours to fully recharge them. Normally, you won't run batteries down completely, since the running time with a full charge is up to 20 minutes. It varies depending on your usage, but most grinding tasks take only about 5 seconds. If your battery is no longer charging, it is time to replace the battery. Please call our Consumer Service Center at 1-800-726-0190 for instructions on returning your unit for battery replacement.

CONTINUOUS CHARGING

The unit is designed so that the batteries may remain on continuous charge. It is recommended that the Salt, Pepper and Spice Mill charger be kept plugged into a wall socket, so that the mill will always be ready to use. Leaving the unit on continuous charge is inexpensive in terms of the amount of electricity being used.

Use only with the charger provided with the appliance. Do not attempt to use this charger with any other product. Likewise, do not attempt to charge this appliance with any other charger.

HOLDING THE CHARGE

The batteries hold most of their charge even when not plugged in and charging, losing only about 30% of total charge per month.

SHORT RUN TIMES

If, after repeated use, the run time seems to get shorter and the Salt, Pepper and Spice Mill has less power, remove the plug from the wall outlet and continue to use mill until it is fully discharged and stops operating. Plug base back into wall outlet and recharge the unit for 13 hours or overnight for a full new charge. This procedure improves battery capacity and should be repeated once every 2–3 months to ensure optimum performance.

CLEANING AND MAINTENANCE

Simply wipe all parts with a damp cloth then dry thoroughly. Do not place in the dishwasher. Avoid wetting battery contacts. Any other servicing should be performed by an authorized service representative.

DISPOSAL/RECYCLING OF BATTERIES

This product uses four NiMH rechargeable and recyclable batteries. At the end of the batteries' useful life, they should be recycled. These batteries must not be incinerated or composted.

NiMH batteries should not be put in municipal waste systems. Contact your local waste collection agency for proper recycling and disposal information for your area.

Please do not attempt to dismantle the mill to replace these batteries on your own. Damage could result to the unit.

When it is time to replace and/or recycle the batteries, or to receive additional instructions for disposing of old batteries, call toll-free 1-800-726-0190 for instructions on how to ship your Salt, Pepper and Spice Mill back to Cuisinart. Or send the Salt, Pepper and Spice Mill to: Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307.

WARRANTY

Limited Three-Year Warranty

This warranty is available to consumers only. You are a consumer if you own a Cuisinart® Salt, Pepper and Spice Mill that was purchased at retail for personal, family or household use. Except as otherwise required under applicable law, this warranty is not available to retailers or other commercial purchasers or owners. We warrant that your Cuisinart® Salt, Pepper and Spice Mill will be free of defects in materials and workmanship under normal home use for 3 years from the date of original purchase.

We recommend that you visit our website, www.cuisinart.com for a fast, efficient way to complete your product registration. However, product registration does not eliminate the need for the consumer to maintain the original proof of purchase in order to obtain the warranty benefits. In the event that you do not have proof of purchase date, the purchase date for purposes of this warranty will be the date of manufacture.

If your Cuisinart® Salt, Pepper and Spice Mill should prove to be defective within the warranty period, we will repair it, or if we think necessary, replace it. To obtain warranty service, simply call our toll-free number 1-800-726-0190 for additional information from our Customer Service Representatives, or send the defective product to Customer Service at Cuisinart, 7475 North Glen Harbor Blvd., Glendale, AZ 85307.

To facilitate the speed and accuracy of your return, please enclose \$10.00 for shipping and handling of the product.

Please pay by check or money order (California residents need only supply proof of purchase and should call 1-800-726-0190 for shipping instructions).

NOTE: For added protection and secure handling of any Cuisinart® product that is being returned, we recommend you use a traceable, insured delivery service. Cuisinart cannot be held responsible for in-transit damage or for packages that are not delivered to us. Lost and/or damaged products are not covered under warranty. Please be sure to include your return address, daytime phone number, description of the product defect, product model number (located on bottom of product), original date of purchase, and any other information pertinent to the product's return.

CALIFORNIA RESIDENTS ONLY:

California law provides that for In-Warranty Service, California residents have the option of returning a nonconforming product (A) to the store where it was purchased or (B) to another retail

store that sells Cuisinart® products of the same type. The retail store shall then, at its discretion, either repair the product, refer the consumer to an independent repair facility, replace the product, or refund the purchase price less the amount directly attributable to the consumer's prior usage of the product. If the above two options do not result in the appropriate relief to the consumer, the consumer may then take the product to an independent repair facility if service or repair can be economically accomplished. Cuisinart and not the consumer will be responsible for the reasonable cost of such service, repair, replacement, or refund for nonconforming products under warranty.

California residents may also, according to their preference, return nonconforming products directly to Cuisinart for repair, or if necessary, replacement, by calling our Consumer Service Center toll-free at 1-800-726-0190.

Cuisinart will be responsible for the cost of the repair, replacement, and shipping and handling for such products under warranty.

BEFORE RETURNING YOUR CUISINART® PRODUCT

If you are experiencing problems with your Cuisinart® product, we suggest that you call our Cuisinart® Service Center at 1-800-726-0190 before returning the product to be serviced. If servicing is needed, a representative can confirm whether the product is under warranty and direct you to the nearest service location.

Your Cuisinart® Salt, Pepper and Spice Mill has been manufactured to the strictest specifications and has been designed for use only in 120 volt outlets and only with authorized accessories and replacement parts. This warranty expressly excludes any defects or damages caused by attempted use of this unit with a converter, as well as use with accessories, replacement parts or repair service other than those authorized by Cuisinart. This warranty does not cover any damage caused by accident, misuse, shipment or other than ordinary household use. This warranty excludes all incidental or consequential damages. Some states do not allow the exclusion or limitation of these damages, so these exclusions may not apply to you. You may also have other rights, which vary from state to state.

Important: If the nonconforming product is to be serviced by someone other than Cuisinart's Authorized Service Center, please remind the servicer to call our Consumer Service Center at 1-800-726-0190 to ensure that the problem is properly diagnosed, the product is serviced with the correct parts, and the product is still under warranty.

©2014 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Printed in China

14CE004502

G IB-12261-ESP

Trademarks or service marks referred to herein are the
trademarks or service marks of their respective owners.

Todas marcas registradas o marcas de comercio
mencionadas en esta pertenecen a sus titulares
respectivos.

G IB-12261-ESP

14CE004502

©2014 Cuisinart
150 Milford Road
East Windsor, NJ 08520
Impreso en la China

GARANTÍA

Garantía limitada de tres años

Esta garantía es para los consumidores solamente. Usted es un consumidor si ha comprado su aparato Cuisinart® en una tienda, para uso personal o casero. A excepción de los estados donde la ley lo permite, esta garantía no es para los detallistas u otros comerciantes. Cuisinart garantiza este aparato contra todo defecto de materiales o fabricación durante 3 años después de la fecha de compra original, siempre que el aparato haya sido utilizado para uso doméstico y según las instrucciones.

Le aconsejamos que llene el formulario de registro disponible en www.cuisinart.com a fin de facilitar la verificación de la fecha de compra original. Sin embargo, registrar el producto no es necesario para recibir servicio bajo esta garantía. En ausencia del recibo de compra, el período de garantía será calculado a partir de la fecha de fabricación.

Si este aparato presentara algún defecto de materiales o fabricación durante el período de garantía, la reparamos o reemplazaremos (a nuestra opción). Para obtener servicio bajo esta garantía, llame a nuestra línea directa gratuita al 1-800-726-0190 o regrese el aparato defectuoso a: Cuisinart, Service Department, 7475 North Glen Harbor Blvd., Glendale, AZ 85307.

Regrese el aparato defectuoso, junto con su recibo de compra y un cheque o giro postal de US\$10.00 por gastos de manejo y envío.

Los residentes de California sólo necesitan dar una prueba de compra y deben llamar al 1-800-726-0190 para recibir instrucciones de envío.

NOTA: para mayor seguridad, le aconsejamos que mande su paquete por un método de entrega con seguro y seguimiento. Cuisinart no será responsable por los daños ocurridos durante el transporte o por los paquetes mandados a una dirección equivocada. Los productos perdidos y/o lastimados durante el envío no serán cubiertos bajo esta garantía. Recuerde incluir su nombre, dirección y teléfono, la descripción del problema, así como cualquier información pertinente.

RESIDENTES DE CALIFORNIA SOLAMENTE

La ley del estado de California ofrece dos opciones bajo el período de garantía. Los residentes del estado de California pueden (A) regresar el producto defectuoso a la tienda donde lo compraron o (B) a otra tienda que venda productos Cuisinart® de este tipo. La tienda, a su opción, bajo garantía.

reparar el producto, referirá el consumidor a un centro de servicio independiente, cambiará el producto o reembolsará el consumidor por el precio original del producto, menos la cantidad imputable al uso del producto por el consumidor hasta que éste se dañe. Si estas dos opciones no satisfacen al consumidor, podrá llevar el producto a un centro de servicio independiente, siempre que se pueda ajustar o reparar el producto de manera económica. Cuisinart será responsable por los gastos de servicio, reparación, reemplazo o reembolso de los productos defectuosos durante el período de garantía.

Los residentes de California también pueden, si lo desean, mandar el aparato defectuoso directamente a Cuisinart para que lo reparen o lo cambien. Para esto, se debe llamar a nuestro servicio posventa al 1-800-726-0190.

Cuisinart será responsable por los gastos de reparación, reemplazo, manejo y envío de los productos defectuosos durante el período de garantía.

ANTES DE HACER REPARAR SU APARATO

Si su aparato tiene algún problema, le recomendamos que llame a nuestro servicio posventa al 1-800-726-0190 antes de regresar el aparato a Cuisinart. Un representante le confirmará la dirección del centro de servicio más cercano.

Este aparato satisface las más altas exigencias de fabricación y ha sido diseñado para uso sobre corriente de 120V, usando accesorios y piezas de repuesto autorizados solamente. Esta garantía excluye e x p r e s a m e n t e los daños causados por accesorios, piezas o reparaciones no autorizados por Cuisinart, así como los daños causados por el uso de un convertidor de voltaje. Esta garantía no cubre el uso insitucional o comercial del producto, y no es válida en caso de daños causados por mal uso, negligencia o accidente. Esta garantía excluye expresamente todos los daños incidentales o consecuentes. Algunos Estados no permiten la exclusión o limitación de daños incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted. Usted puede tener otros derechos que varían de un Estado a otro.

Importante: si debe llevar el aparato defectuoso a un centro de servicio no autorizado, por favor informe al personal del centro de servicio que deberán llamar al servicio posventa de Cuisinart al 1-800-726-0190 a fin de diagnosticar el problema correctamente, usar las piezas correctas para repararlo y asegurarse de que el producto esté bajo garantía.

MANTENIMIENTO DE LA CARGA

Las baterías mantienen la carga aunque el aparato no está enchufado y cargando, perdiendo aproximadamente el 30% de la carga total por mes.

TIEMPO DE FUNCIONAMIENTO REDUCIDO

Si, después de usar el aparato repetidamente, el tiempo de funcionamiento parece ser más corto y el molinillo tiene menos potencia, desconecte la base de carga y haga funcionar el molinillo hasta que esté completamente descargado. Después, vuelva a conectar la base de carga a la toma de corriente y cargue el molinillo durante 13 horas. Para mejorar la capacidad de carga de las baterías, le

aconsejamos que haga esto cada 2-3 meses.

LIMPIEZA Y

MANTENIMIENTO

Simplemente limpie todas las piezas con un paño ligeramente humedecido y séquelo bien. No meta ninguna de las piezas al lavavajillas. Evite mojar los contactos de las baterías. Cualquier otro servicio debe ser realizado por un técnico autorizado.

RECICLAJE DE LAS BATERÍAS

Este producto utiliza cuatro baterías NiMH recargables y reciclables. Las baterías deben ser recicladas al final de su vida útil. No quemar las baterías, ni las coloque en un compostador. Tampoco se debe tirar las baterías con el resto de la basura. Para más información acerca del reciclaje de las baterías, comuníquese con las autoridades locales en materia de reciclaje y eliminación de desechos.

No intente desarmar la unidad para cambiar las baterías. Esto podría dañar el aparato.

Cuando es tiempo de cambiar las baterías,

llame al 1-800-726-0190 para pedir una nueva unidad, la cual contiene nuevas baterías. O

mande el molinillo a: Cuisinart, 7475 North Glen Harbor Blvd, Glendale, AZ 85307.

molinillo hasta desalojar el grano de pimienta.

- Nunca llene el recipiente con especias húmedas o mojadas. Esto obstruirá el mecanismo de molienda. Le aconsejamos que utilice especias secas compradas en tienda.

- Para mejorar el rendimiento de las baterías recargables, le aconsejamos que de vez en cuando, desconecte la base de carga y utilice cada molinillo hasta que las baterías estén completamente descargadas. Después, conecte la base de carga a la toma de corriente y vuelva a cargar los molinillos durante 13 horas. Para mejorar la capacidad de carga de las baterías, le aconsejamos que haga esto cada 2-3 meses.

- Utilice un paño ligeramente humedecido para limpiar los molinillos y la base de carga, y séquelos bien. No los meta al lavavajillas. Evite mojar los contactos de las baterías.

CARGA Y VIDA ÚTIL DE LAS BATERÍAS

Su molinillo de sal, pimienta y especias recargables Cuisinart® está equipado con baterías recargables de níquel e hidruro metálico (NiMH). Hemos seleccionado estas baterías por su larga vida útil y autonomía.

Si las baterías se descargan completamente, se deberán poner a cargar durante 8-13 horas para recargarse completamente. Una vez cargadas, las baterías tienen una autonomía de 20 minutos. Moler sal o pimienta requiere tan sólo 5 segundos. Si la batería ya no se carga, es tiempo de cambiarla. Comuníquese con nuestro servicio de atención al cliente, llamando al 1-800-726-0190, para regresar la unidad a nuestro centro de servicio a fin de reemplazar las baterías.

CARGA CONTINUA

Este aparato ha sido diseñado para poder mantenerse cargando. Le aconsejamos que siempre deje la base de carga conectada a la toma de corriente; de esta manera, el molinillo siempre estará listo. La base de carga no consume mucha electricidad y no notará una diferencia en su factura eléctrica.

Utilice el adaptador sector y la base de carga provistos únicamente. No intente utilizar la base de carga con otro producto. Tampoco intente cargar este producto con otra base de carga.

INSTRUCCIONES DE CARGA

Para cargar el molinillo de sal, pimienta y especias:


1. Ensamble el molinillo y la base de carga según se describió en la página anterior.



2. Agarre la unidad seguramente, de manera que quede recta (el logotipo Cuisinart puede leerse) (Fig. 10).



3. Coloque el molinillo sobre la base de carga, asegúrandose de que el conector de la unidad encaje debidamente sobre el conector de la base de carga. Esto sólo puede ocurrir cuando la unidad y la base de carga están debidamente alineadas (Fig. 11).

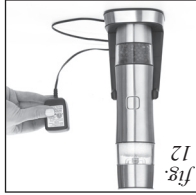

4. Conecte el cable a una toma de corriente de 120V. La unidad está cargando (Fig. 12).

INSTRUCCIONES DE OPERACION

1. Coloque la base y todas las piezas extrahibles sobre una superficie plana, seca y seca. Cerciórese que todas las piezas estén limpias, secas y debidamente ensambladas.

2. Llene el recipiente deseado con sal marina, granos de pimienta o las especias secas deseadas e instálelo sobre la unidad. **NOTA:** sostenga el recipiente recto al instalarlo.

3. Alinee la flecha del recipiente con la flecha de la base. **NOTA:** cada flecha debe apuntar hacia la otra; esto indica que el recipiente y la unidad están debidamente alineados.

4. Presione suavemente el recipiente y la unidad uno hacia otro. No debería encontrar resistencia.

5. Gire el recipiente en sentido horario hasta que la flecha de la unidad quede alineada con el candado cerrado del recipiente. **NOTA:** escuchará un "clic", lo que indica que las piezas están debidamente ensambladas.

6. Para instalar el segundo recipiente, voltee la unidad y repita las instrucciones de ensamblaje.

7. Presione el botón de encendido/apagado. **NOTA:** solamente el recipiente que apunta hacia abajo molerá sal/pimienta/especias. **NOTA:** aunque el recipiente que apunta hacia arriba gira, no molerá.

8. Para usar la tapa medidora, conectela debajo del recipiente deseado, alineando las ranuras de la tapa medidora con los resaltos del recipiente. Presione ambas piezas una hacia otra hasta que la tapa medidora quede ajustada sobre el recipiente. **NOTA:** la tapa medidora puede instalarse sobre cualquiera de los recipientes, durante el uso solamente. Cuando no la usa, guárdela arriba de la unidad, ya que ésta no cabrá en la base de carga con la tapa medidora puesta abajo.

CÓMO AJUSTAR EL GRADO DE MOLIENDA



Para ajustar el grado de la molienda, desde fina hasta gruesa, utilice el dial ubicado debajo de cada molinillo. Gire el dial en sentido horario para obtener una molienda más gruesa, o en sentido antihorario para obtener una molienda más fina.

CONSEJOS RÁPIDOS

• Antes del primer uso, deberá cargar las baterías durante 13 horas.

• Para desalojar granos de pimienta trabados en la rueda de moler:

1. Sostenga el molinillo boca abajo y sacúdalo suavemente mientras oprime el botón de encendido.

2. Sostenga el molinillo boca abajo, coloque el selector del grado de molienda sobre "molienda gruesa" y haga funcionar el

ENSAMBLAJE

Para ensamblar el molinillo:

1. Coloque la base y todas las piezas extraíbles sobre una superficie plana, seca y segura. Cerciórese que todas las piezas están limpias y secas.





2. Instale el primer recipiente sobre la base. **NOTA:** se le hará más fácil instalar cada recipiente sosteniendo la unidad recta e instalando el recipiente abajo de la misma

3. Alinee la flecha del recipiente con la flecha de la base. **NOTA:** cada flecha debe apuntar hacia la otra; esto indica que el recipiente y la unidad están debidamente

4. Presione suavemente el recipiente y la unidad uno hacia otro. No deberá encontrar resistencia (Fig. 3).

5. Círe el recipiente en sentido horario hasta que la fecha de la unidad quede alineada con el candado cerrado del recipiente. **NOTA:** escuchará un "click", lo que indica que las piezas están debidamente

6. Para instalar el segundo recipiente, voltee la base y repita las instrucciones de ensamblaje (Fig. 5).

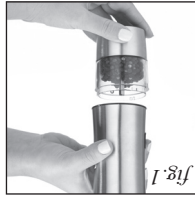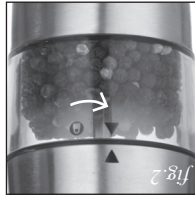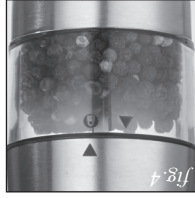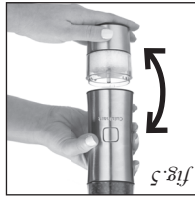

7. Su molinillo de sal, Cuisinart® está listo pimienta y especias (Fig. 6).



Para usar la tapa medidora:

1. Para usar la tapa medidora, conectela medidora, conectela debajo del recipiente deseado, alineando las ranuras de la tapa medidora con los resaltes del recipiente (Fig. 7).


2. Presione ambas piezas una hacia otra hasta que la tapa medidora quede ajustada sobre el recipiente. **NOTA:** cuando no la usa, guarde la tapa arriba de la unidad, ya que no cabrá en la base de carga con la tapa medidora puesta abajo.

Para ensamblar la base de carga:

1. Coloque el bloque-motor, la base de carga y las piezas extraíbles sobre una superficie plana, seca y segura. Cerciórese que todas las piezas están limpias y secas.

2. Instale la bandeja de residuos removible sobre la base de carga. **NOTA:** la bandeja puede instalarse sobre la base de carga solamente de una manera (Fig. 8).

3. Conecte el adaptador sector a la base de carga, introduciendo las patas verticalmente en la parte trasera de la base. **NOTA:** no conecte el adaptador sector a la toma de corriente hasta después de haberlo conectado a la base de carga (Fig. 9).

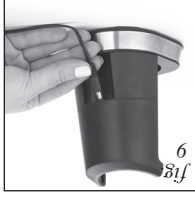

PIEZAS Y CARACTERÍSTICAS

1. Tapa medidora con capacidad de 1 cucharadita

2. Recipientes removibles transparentes Guardan porciones más grandes; requieren llenarse con menos frecuencia

3. Baterías recargables (no ilustradas)

4. Cuerpo de agarre cómodo Ergonómicamente diseñado para máxima comodidad y facilidad de uso

5. Botón de encendido/apagado Enciende el molinillo al toque de un botón

6. Base de carga Se conecta a la toma de corriente para recargar la unidad

7. Bandeja de residuos Bandeja removible que permite tirar los residuos de especias fácilmente

8. Luz de carga/ listo Una luz roja indica que el molinillo está cargando, una luz azul indica que está completamente cargado

9. Control de molienda Permite elegir entre 5 grados de molienda, desde grueso hasta fino

10. Indicador de dirección Indica en qué dirección girar el control de molienda para conseguir el grado de molienda deseado

11. Sin BPA (no ilustrado) Ninguna de las piezas en contacto con los alimentos contiene bisfenol A (BPA).



MEDIDAS DE SEGURIDAD IMPORTANTES

Siempre que use aparatos eléctricos, debe tomar precauciones básicas de seguridad, incluso las siguientes:

1. LEA TODAS LAS INSTRUCCIONES.

2. Para reducir el riesgo de electrocución, no ponga la base de carga o el bloque-motor en agua u otro líquido. No sumerja ninguna otra parte del aparato en agua u otro líquido. Si el aparato cae en líquido, desconéctelo y luego retírelo del líquido. Limpie y seque cuidadosamente la unidad antes de continuar.

3. No haga funcionar el aparato en la presencia de vapores explosivos o inflamables.

4. Desconecte la base de carga de la toma de corriente antes de limpiarla.

5. Conecte la base en una toma de corriente alejada del fregadero o de superficies calientes.

6. No utilice una extensión. Enchufe la base de carga directamente en una toma de corriente.

7. No utilice el aparato para ningún otro fin que no sea el indicado.

8. No utilice este aparato si el cable o la clavija estuviesen dañados, después de que cado o si estuviese dañado. Regrese el aparato a un centro de servicio autorizado para su revisión, reparación o ajuste.

9. El uso de accesorios no recomendados por Cuisinart presenta un riesgo de incendio, electrocución o herida.

10. Para uso doméstico solamente. No aprobado para uso comercial o industrial.

11. No utilice el cargador si está dañado. Reemplace el cargador inmediatamente.

12. Utilice el adaptador sector y la base de carga proveídos únicamente. No intente utilizar la base de carga con otro producto. Tampoco intente cargar este producto con otra base de carga.

13. No queme el molinillo, aunque este gravemente dañado. Incinerar la batería puede causar graves heridas.

14. Este aparato está equipado con baterías recargables de níquel e hidruro metálico (NiMH), las cuales deben reciclarse según las leyes vigentes al final de la vida útil del

GUARDE ESTAS INSTRUCCIONES PARA USO DOMÉSTICO SOLAMENTE

ÍNDICE

Medidas de seguridad importantes	2
Piezas y características	3
Ensamblaje	4
Funcionamiento	5
Consejos rápidos	5
Instrucciones de carga	6
Limpieza y mantenimiento	6
Reciclaje de las baterías	6
Garantía	7
aparato. Véase la sección "Reciclaje de las baterías" en la página 6. No queme ni coloque las baterías en un compostador, ya que pueden explotar por el calor y causar heridas muy graves.	
15. Las baterías pueden tener fugas bajo condiciones extremas. Si el líquido adentro de las baterías (el cual es una solución de 20-35% de hidróxido de potasio) entra en contacto con la piel, (1) lave la piel rápidamente con agua y jabón y (2) neutralice la acidez de la piel con jugo de limón o vinagre. Si el líquido entrara en contacto con los ojos, enjuáguelos inmediatamente con abundante agua durante 10 minutos o más. Busque atención médica.	
16. Supervise el uso de este aparato cuidadosamente cuando esté siendo usado por o cerca de niños.	
17. Evite el contacto con las piezas móviles.	
18. No lo utilice en exteriores.	
19. No permita que el cable cuelgue del borde de la mesa o de la encimera.	
20. No haga funcionar el aparato bajo o adentro de un armario. Siempre desconecte el aparato antes de guardarlo en un armario.	
Dejar el aparato conectado presenta un riesgo de incendio, especialmente si éste toca las paredes o la puerta del armario cuando cierra.	

Cuisinart®

MANUAL DE
INSTRUCCIONES



BC

SG-3

Molino de sal, pimienta y especias

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

Version no : IB-12261-ESP

Fold Size: 210X148mm Saddle Stitched 16 pp

Material (Cover): 105gsm art paper for whole book
(Inside): _____

Coating: Gloss varnishing in cover

Color (Cover): 4C(CMYK)+1C(BK)

(Inside): 1C(BK)+1C(BK)

Date: APR-18-2014 Co-ordinator: Andy Ws Chan

Hugo Description

PDF version : IB-12261-ESP(1.1) BOOK

Hugo Code : GHI0388IB-1-1 Operator : WEI

Color Series: Non IRP : AAJ

Remark: Quality request (1)

