

7. Al final de la cocción, la unidad emitirá tres pitidos y el indicador luminoso se encenderá.



Gire las placas de tal manera que el indicador luminoso **8.** iluminado se encuentre arriba. Abra las placas y saque el waffle/gofre, usando una espátula resistente al calor.



CÓMO PREPARAR DOS WAFLES/GOFRES A LA VEZ

1. Abra las placas de arriba y vierta la mezcla en el centro la placa inferior. Esparza uniformemente la mezcla, usando una espátula resistente al calor.
2. Cierre y gire las placas 180°; el indicador luminoso se apagará.
3. Ahora, abra las placas de arriba y vierta la mezcla en el centro la placa inferior. Esparza uniformemente la mezcla, usando una espátula resistente al calor. Cierre y gire las placas 180°.
4. Cuando el primer waffle/gofre esté listo, la unidad emitirá tres pitidos y el indicador luminoso correspondiente se encenderá.
5. Gire las placas de tal manera que el indicador luminoso iluminado se encuentre arriba. Abra las placas y saque el waffle/gofre.
6. Cuando el segundo waffle/gofre esté listo, la unidad emitirá tres pitidos y el indicador luminoso correspondiente se encenderá.
7. Gire las placas de tal manera que el indicador luminoso iluminado se encuentre arriba. Abra las placas y saque el waffle/gofre.

INSTRUCCIONES DE LIMPIEZA

1. Desconecte el aparato y permita que se enfríe antes de limpiarlo o guardarlo. Después de cada uso, apague (OFF) y desconecte el aparato. Abra las placas y permita que se enfríen completamente antes de limpiarlas.
2. Elimine los residuos de las placas con una brocha y absorba el aceite con un papel absorbente o un paño seco. Si es necesario, limpie las placas con un paño ligeramente humedecido para eliminar las manchas y la acumulación de residuos de aceite y evitar que la mezcla pegue.
3. Limpie la carcasa del aparato con un paño suave seco. Nunca utilice limpiadores abrasivos ni estropajos duros.

¡IMPORTANTE!

No tire este folleto a la basura. Lea esta información antes de usar su nueva gofrera por primera vez. Guarde esta información para futura referencia.

Estos útiles consejos complementan el manual de Instrucciones. Para lograr un rendimiento óptimo y una operación segura, lea el manual de Instrucciones.

QUICK REFERENCE GUIDE


Cuisinart®

Double Belgian Waffle Maker



BEFORE FIRST USE

Remove all packaging and any promotional labels or stickers from your waffle maker. Wipe housing and baking plates with a damp cloth to remove any dust from the warehouse or shipping.

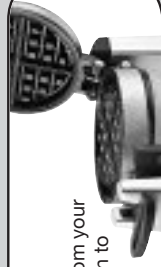

OPERATING INSTRUCTIONS

MAKING ONE WAFFLE

1 Place the Double Belgian Waffle Maker on a clean flat surface. Plug cord into 120V AC wall or outlet.



2 Turn the rocker switch to the ON position. Adjust control knob to a desired setting. Your Cuisinart Double Belgian Waffle Maker will now begin preheating.



3 Once preheated the indicator lights will be illuminated and the waffle maker will beep 6 times.



4 After waffle maker is preheated, season waffle plates with cooking spray or brush with a flavorless oil to thoroughly coat all surfaces.

5 Fill the provided measuring cup with batter. Open the waffle maker lid. Pour waffle batter evenly on the waffle plate. Use a heatproof spatula to spread the batter evenly over the plate.



6. Close top cover and rotate the waffle maker 180°.



PG-35015-ESP

7. When the waffle is baked to the desired doneness, the unit will beep three times and the indicator light will illuminate.



8. Rotate waffle plate with the lit indicator light to the top position. Raise top cover and remove the baked waffle with a heatproof spatula.



MAKING TWO WAFFLES AT ONE TIME

1. Raise top cover and pour waffle batter evenly on the waffle plate. Use a heatproof spatula to spread the batter evenly over the plate.
2. Close top cover and rotate the waffle maker 180°. The Ready indicator light will turn off.
3. Raise the cover that is now on top and pour waffle batter evenly on the waffle plate. Use a heatproof spatula to spread the batter evenly over the plate. Close the cover and rotate the waffle maker 180°.
4. When one of the waffles is done, the unit will beep three times and an indicator light located on the waffle maker cover will illuminate.
5. Rotate the waffle plates with the lit indicator to the top position. Raise the top cover and remove the baked waffle.
6. When the second waffle is baked to the preferred setting, the unit will beep three times and a light located on the waffle grid cover will illuminate.
7. Rotate the waffle maker with the lit indicator to the top position. Raise the top cover and remove the baked waffle.

CLEANING AND CARE

The waffle maker must be unplugged and completely cool before cleaning or storing.

1. Once you have finished baking, turn the unit to the OFF position; remove plug from electrical outlet. Leave top lid open and allow grids to cool down completely before cleaning.
2. To clean, brush crumbs from grooves, and absorb any excess cooking oil by wiping with a dry cloth or paper towel. You may clean the grids by wiping with a damp cloth to prevent staining and sticking from batter or oil buildup.
3. To clean exterior, wipe with a soft, dry cloth. Never use an abrasive cleanser or harsh pad.

IMPORTANT!

Do not discard. Read before operating your new Cuisinart® Double Belgian Waffle Maker. Keep for further reference.

These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure proper operation and optimum performance, please read the entire Instruction Booklet.

GUÍA DE REFERENCIA RÁPIDA

Cuisinart®

Waflera/Gofrera doble



ANTES DEL PRIMER USO

Retire el aparato del material de embalaje y quite las etiquetas promocionales pegadas en su cuerpo. Limpie el cuerpo del aparato y las placas con un paño humedecido para eliminar el polvo acumulado durante la fabricación y el transporte.



INSTRUCCIONES DE OPERACIÓN CÓMO PREPARAR SOLAMENTE UN WAFLE/GOFRE A LA VEZ

1

- Coloque el aparato sobre una superficie limpia y plana.
- Conecte el cable a una toma de corriente 120 V AC.



2

- Encienda el aparato (ON). Ajuste la temperatura al nivel deseado; el aparato empezará a calentarse.



3

- Cuando alcance la temperatura adecuada, los indicadores luminosos se encenderán y el aparato emitirá 6 pitidos.



4

- Una vez calientes, aceite las placas con aceite o spray vegetal sin sabor.

5

- Llene el vaso medidor hasta arriba con la mezcla. Abra las placas. Vierta la mezcla en el centro de la placa inferior. Esparza uniformemente la mezcla, usando una espátula resistente al calor.



6

- Cierre y gire las placas 180°.



PG-35015-ESP